




# Trio-1248

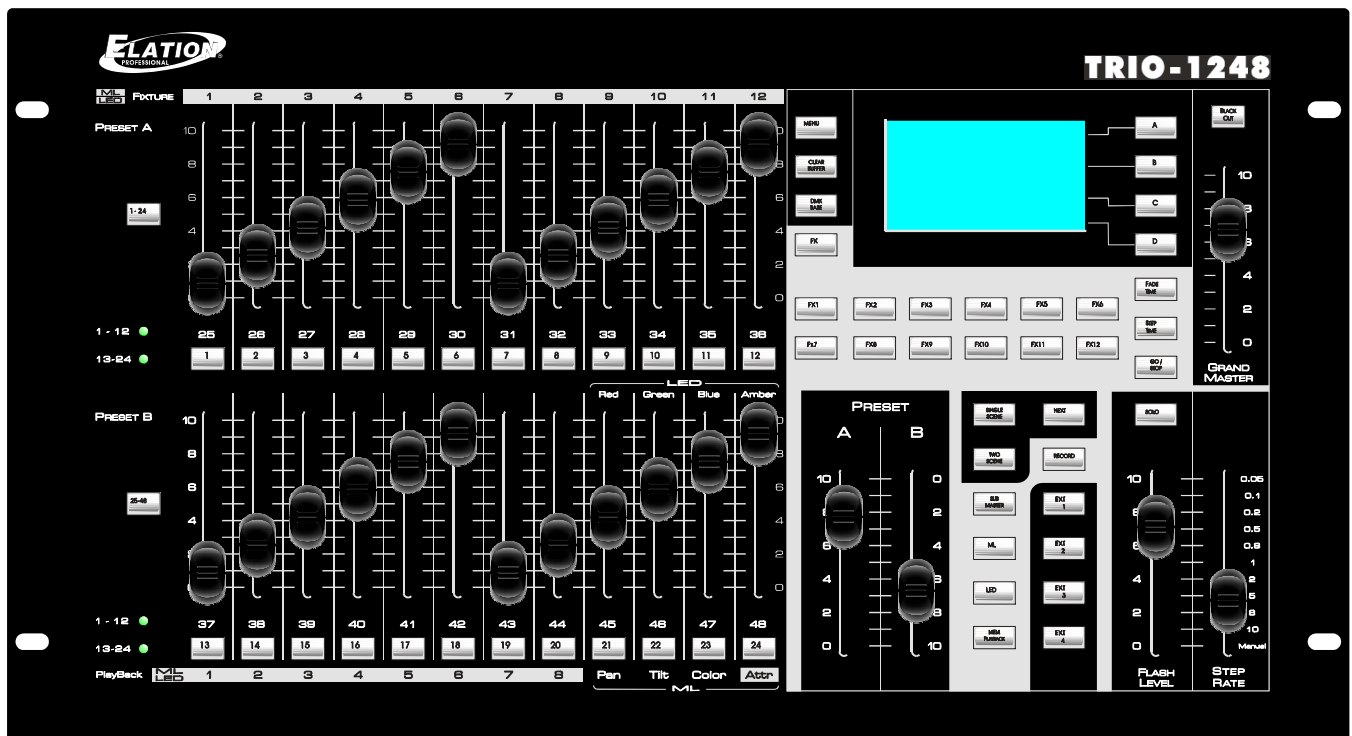

|   |    |
|---|----|
| 1. General Introduction.....                  | 3  |
| 1.1 Thank you for Purchasing Trio-1248.....   | 3  |
| 1.2 Customer Service.....                     | 3  |
| 2. General Information.....                   | 4  |
| 2.1 Safety.....                               | 4  |
| 2.2 Compliance.....                           | 4  |
| 2.3 Abbreviations.....                        | 4  |
| 3. Introduction.....                          | 5  |
| 3.1 About the Trio-1248 Lighting console..... | 5  |
| 3.2 Unpacking.....                            | 5  |
| 3.3 Caution.....                              | 5  |
| 3.4 Main Features.....                        | 6  |
| 3.5 Controls & Functions.....                 | 7  |
| 3.6 Connection Ports.....                     | 9  |
| 3.7 Manual Conventions.....                   | 10 |
| 4. Normal Operation.....                      | 11 |
| 4.1 Single Scene Mode.....                    | 11 |
| 4.1.1 Crossfade in Single Scenes.....         | 11 |
| 4.1.2 Fade A and B Settings.....              | 12 |
| 4.2 Two Scene Mode.....                       | 12 |
| 4.3 Submaster Mode.....                       | 13 |
| 4.3.1 Fade A and B Settings.....              | 14 |
| 4.3.2 Crossfade in Submaster.....             | 14 |
| 4.3.3 Record Function.....                    | 15 |
| -Record Submaster.....                        | 15 |
| -Record Fx1 through F12.....                  | 16 |
| -How to edit a scene.....                     | 17 |
| -How to Trigger Fx.....                       | 17 |
| -How to delete Fx.....                        | 17 |
| -How to set EXT Keys.....                     | 18 |
| -Record DMX Base.....                         | 18 |
| 4.4 ML(Moving Light).....                     | 20 |
| 4.4.1 Concept.....                            | 20 |
| 4.4.2 Menu.....                               | 20 |
| -Patching Moving Light fixtures.....          | 20 |
| -Using Groups.....                            | 22 |
| -Control Fixtures.....                        | 24 |
| -Preset Palette.....                          | 24 |
| -Shape.....                                   | 25 |
| -Playback.....                                | 26 |
| -Pan/Tilt Invert.....                         | 27 |
| 4.5 LED Mode.....                             | 28 |
| 4.5.1 FIX Patch.....                          | 28 |
| 4.5.2 Channel Set Up.....                     | 28 |
| 4.5.3 Using Groups.....                       | 29 |
| 4.5.4 Delete.....                             | 29 |
| 4.5.5 Listfix.....                            | 30 |

|   |    |
|---|----|
| 4.5.6 Auto DMX.....                         | 30 |
| 4.5.7 Using Shape.....                      | 30 |
| 4.6 Memory Playback Mode.....               | 32 |
| 4.7 Menu.....                               | 34 |
| 4.7.1 Channel Set Up.....                   | 35 |
| 4.7.2 DMX Patch.....                        | 35 |
| -Channel Patch.....                         | 35 |
| -DMX Patch.....                             | 36 |
| -Default.....                               | 36 |
| 4.7.3 LCD Set.....                          | 36 |
| 4.7.4 Memory Lock.....                      | 37 |
| 4.7.5 Update Software.....                  | 37 |
| 4.7.6 Update VGA.....                       | 37 |
| 4.7.7 Update DMX-BS.....                    | 38 |
| 4.7.8 VGA Set.....                          | 41 |
| 4.7.9 Art Net Set.....                      | 42 |
| 4.7.10 Upload LIB.....                      | 42 |
| 4.7.11 LIB Set.....                         | 43 |
| 4.7.12 Change Password.....                 | 44 |
| 4.7.13 Rev1.02.....                         | 45 |
| 4.8 VGA Card Installation Tips.....         | 45 |
| 5. DMX Setup.....                           | 46 |
| 5.1 Data Cable(DMX Cable) Requirements..... | 46 |
| 5.2 5-pin XLR DMX Connectors.....           | 47 |
| 6. Service.....                             | 48 |
| 6.1 Maintenance.....                        | 48 |
| 6.1.1 General Inspection.....               | 48 |
| 6.1.2 Basic Cleaning.....                   | 48 |
| 6.2 Trouble Shooting.....                   | 48 |
| Elation Support.....                        | 49 |
| Warranty.....                               | 50 |

### 1.1 Thank You for Purchasing the Trio-1248

Thank you for your purchasing the Elation Professional Trio-1248 Lighting Console. Please read the instructions in this manual carefully and thoroughly before attempting to operate this unit. These instructions contain important information regarding safety during use and maintenance. Please fill out and return the enclosed warranty card to validate your purchase.

### 1.2 Customer Service

Elation provides a toll free customer support line, to provide set up help and to answer question should you encounter problems during you set up or initial operation. You may also visit us the web at [www.elationlighting.com](http://www.elationlighting.com) for any comments or suggestions.

All returned service items whether warranty or not, must be freight pre-paid and accompany a Return Authorization(RA) number. The RA number must be clearly written on the outside of the return package. Items returned without a RA number clearly marked on the outside of the package will be refused and returned at customer's expense. You may obtain a RA number by contacting customer service.

A brief description of the problem as well as RA number must be written down on a piece of paper and include in the shipping container. If the unit is under warranty, you must also provide a copy of your proof of purchase invoice.

Customer Service house are Monday through Friday 8:00a.m.-5:00 p.m. Pacific Standard Time.

Toll Free: (866) 245-6726

Phone: (323) 582-3322

Fax: (323) 832-9142

Information: [info@elationlighting.com](mailto:info@elationlighting.com)

Sales: [sales@elationlighting.com](mailto:sales@elationlighting.com)

Support: [support@elationlighting.com](mailto:support@elationlighting.com)

Forum: <http://forums.elationlighting.com>

This manual is Copyright © 2008 Elation Professional. All rights reserved. No part of the manual included with this product can be reproduced or transmitted in any form, by any means, for any purpose without prior written authorized permission.

Information contained in this manual is subject to change at any time and without notice. Please contact Elation Customer Service or visit [www.elationlighting.com](http://www.elationlighting.com)

## 2. General Information

### 2.1 Safety

The following symbols are used throughout this manual:



WARNING

Indicates potential injury or death to persons.



CAUTION

Indicates potential damage to equipment.



RECYCLE

Indicates items may be recycled.

The following safety information relates to the Trio-1248 Lighting Console. Please read each item carefully to ensure you fully understand them.

To prevent the risk of electrical shock, do not open this unit. There are no user serviceable parts inside this unit. Do not attempt any repairs yourself. Doing so will void your manufacturer's warranty. Should your unit require service, please contact your nearest Elation dealer or Elation Customer Service.

To prevent or reduce the risk of electrical shock or fire, do not expose this unit to rain or moisture. Do not remove the plug ground pin or connect to an ungrounded circuit.

This unit is not designed for use by persons under the age of 12. Use only under adult supervision.

Turn off the power if not using this unit for a long time.

### 2.2 Compliance:

The CE marking (an acronym for the French "Conformite Europeenne") certifies that a product has met EU health, safety, and environmental requirements, which ensure consumer safety. A manufacturer that has gone through the conformity assessment process may affix the CE marking to the product.

The Trio-1248 system has passed internal testing based on the EN55015:2001 standard, and is 100% CE compliant. We certify that the product conforms to the protection requirements of council directives 73/23/EEC (LVD) and 89/336/EEC (EMC).

### 2.3 Abbreviations:

**DMX** – Digital Multiplex

**Gb** – Gigabyte

**Ghz** – Gigahertz

**LAN** – Local Area Network

**Mb** – Megabyte

**PC** – Personal Computer

**RA** – Return Authorization

**RAM** – Random Access Memory

**RGB** – Red, Green, Blue

**USB** – Universal Serial Bus

**XLR** – 3 & 5-pin Cannon X connector, with Latch and Rubber guard

### **3. Introduction**

#### **3.1 About the Trio-1248 Lighting Console:**

The Elation Trio-1248 is a three in one lighting console which was designed to control Conventional dimmers, LED's and Moving Lights. We are sure you'll find your Trio to be extremely powerful and easy to use.

#### **3.2 Unpacking:**

The Elation Professional Trio-1248 has been thoroughly tested and shipped in perfect working condition. Please take a few minutes to carefully inspect the system carton for damage that may have occurred during shipping. If the carton appears to be damaged, carefully inspect each system component for damage, in the case that damage is found, please contact our customer support center, listed below, for further instructions. The Elation Professional Trio-1248 system carton should include the following:


- 1 Trio-1248 Lighting Console
- 1 External AC Adaptor
- 1 User Manual

#### **3.3 Caution!**

There are no user serviceable parts inside this unit. Do not attempt any repairs yourself, doing so will void your manufacturer's warranty. In the unlikely event your unit may require service, please contact your nearest Elation Professional dealer. Do not discard this carton in the trash, please recycle when ever possible. Upon unpacking, carefully inspect your unit for any damage that may have occurred during shipping. If damage may have occurred, do not plug the unit in, please contact your dealer as soon as possible.

**3.4 Main Features**


1. Professional DMX512 Lighting Console. Ideal for conventional, moving and LED lighting fixtures.
2. Powerful, versatile, three in one control.
3. LCD display for easy operation with contrast adjustment. (with optional VGA card).
4. USB port for uploading/downloading data and updating software. (USB Flash Drive Required... NOT INCLUDED)
5. Artnet port for faster communication with compatible device.
6. DMX IN allows 3 pin XLR connection from external console. (Only receives data for DMX Base playback)
7. DMX OUT's A & B send data, via 3 & 5 pin XLR's, to compatible fixtures/devices. DMX Output A should only be used to send data to DMX Base fixtures/devices. DMX Output B should be used to send data to all fixtures/devices which are patched into your TRIO-1248.
8. Buttons change color depending on their current function.
9. Grand Master control for total output control.
10. 1,152 recordable scenes (24 Pages x 48 scenes) in Submaster mode for conventional lights.
11. 24 faders control conventional, moving lights and LED fixture channels.
12. Controls 12 Moving Light fixtures with up to 40 channels each. 20 playbacks x 99 steps in Moving Light Mode.
13. Controls 12 LED (RGB) Fixtures. 20 playbacks x 99 steps in LED mode.
14. 12 FX Keys act as multi function keys which allow the user to program and run 12 independent chase sequences, they also act as playbacks while in DMX Base mode and are also used to enter numeral information such as passwords during setup.
15. 6 operation modes: Single Scene, Two Scene, Submaster, Moving Light(ML), LED mode, Memory Playback modes.
16. Blackout button controls all fixtures. When held for 3 seconds, the blackout button overrides the system and completely brings all fixtures to 0 (example: moving fixtures will return to their home position rather than just blacking out).
17. Memory playback mode allows a combination of Submaster, Led and Moving Light playback.
18. Power requirement of DC 9-12V 2A power supply (Included).
19. Wireless DMX module available (optional).
20. VGA allows for 800 x 600 monitor output.

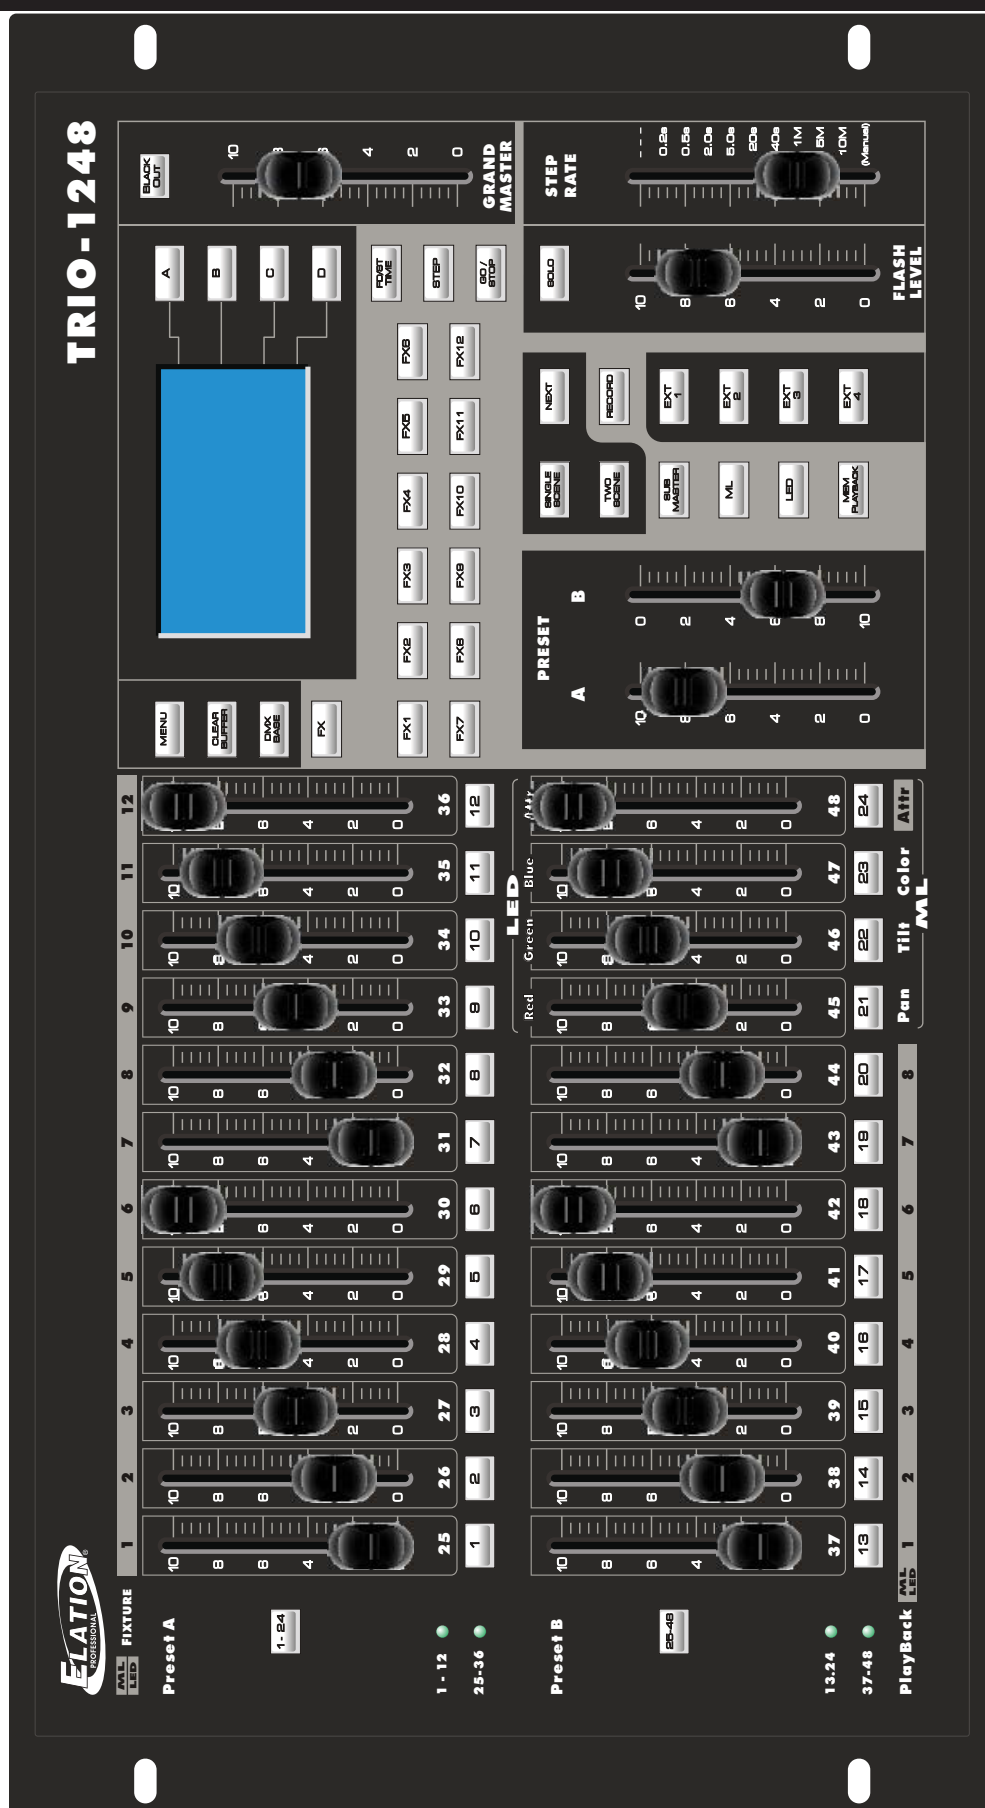



### 3.5 Controls & Functions

1. Key 1-24 and Key 25-48: Used to select Conventional Par's page.
2. Bump Keys 1-24 (25-48 depending on page): Individual bump for channel relevant channel.
3. Single Scene: Used to enter Single Scene Mode.
4. Two Scene: Used to enter Two Scene Mode.
5. ML (Moving Light): Used to enter Moving Light Mode.
6. LED: Used to enter LED Mode.
7. Mem. Playback: Used to enter Memory Playback Mode.
8. Next: Used in conjunction with Preset A & B faders, Single Scene Mode, for manual Scene Cross Fade.
9. Record: Used to record presets and submasters.
10. EXT 1-4: EXT Keys are user assignable keys that give the option to assign a single channel as a Latch or Momentary. Latch acting as an On/Off and Momentary acting as a momentary bump. (Example: a Fog Machine, Strobe or Blinder can be set as "Momentary" so the effect will be active while the relevant EXT key is pressed).
11. Menu: Used to set up each parameter such as DMX channel patch, Fixture patch, update software, lock memory, etc...
12. FX key: Works in conjunction with FX keys 1-12. When the FX key is pressed, Conventional Par Chases can be played back by pressing FX keys 1-12. FX chases 1-12 (Conventional Par Chases) must first be programmed by the user.
13. FX Keys 1-12: are multi function keys that can be used to store/playback Conventional Par Chases, store/trigger Playbacks when in DMX Base mode, and enter numeral information such as Passwords when in the Menu.
14. Clear Buffer: Clears the programmer.
15. DMX Base: Works in conjunction with FX keys 1-12. When the DMX Base key is pressed, Programs 1-12 can be played back by pressing FX keys 1-12. The DMX Base programs, can only consist of recorded data uploaded from an external DMX console. All 12 chases can run simultaneously.
16. FD/ST Time key: This is a multi function key. FD represents "Fade Time". When Fade Time is active, its key will illuminate Red. ST represents "Step Time". When Step Time is active, its key will illuminate Yellow. Fade and Step times can be adjusted by moving the "Step Rate" fader.
17. Step key: Used to store steps while programming FX 1-12 (Conventional Par Chases) and to manually step through ML and LED program steps.
18. Go/Stop: Used to start/stop playback of FX 1-12 (Conventional Par Chases).
19. Solo key: Works in conjunction with the "Flash Level" fader. When in Single and Two Scene modes, pressing bump keys 1-24, will give you temporary output override based on the Flash Level fader setting.
20. Faders 1-24 (25-48 depending on active page): Each fader can be soft-patched to control one or more channels. i.e. - Fader 1 can control channels 1,5,10 & 20 simultaneously.
21. Preset A and Preset B faders: Work in Single and Two Scene Preset modes. In Single scene mode, these faders are used to activate the "Next" function. In Two Scene mode, these faders control Preset A & B intensities for channels 1-12 & 13-24.
22. Flash Level: Represents the max bump output value for all Conventional Par channels.
23. Step Rate: Used to set hold and fade times for all programs during record process and during playback.
24. Grandmaster: Controls output of entire console at all times.

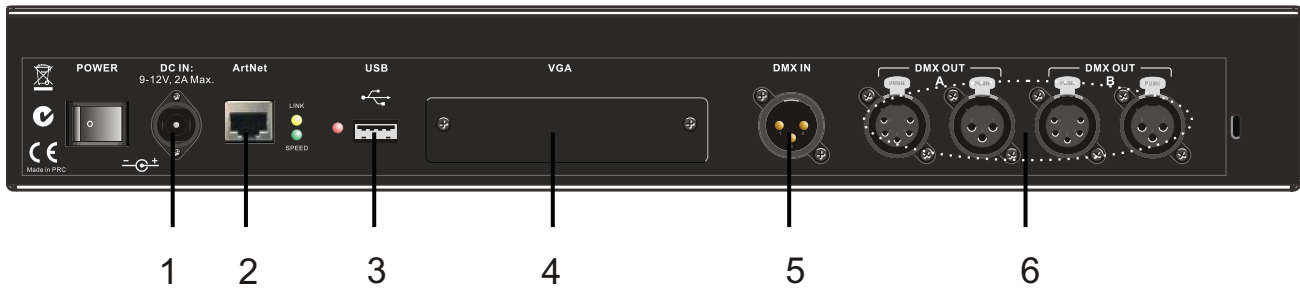

### 3.6 Connection Ports

1. DC IN : Connects the power source with DC 9-12V, 2A Max. (Included).
2. ArtNet: Connects ArtNet with compatible fixtures/devices.
3. USB: Connects any universal USB drive so that data can be uploaded and downloaded to and from the TRIO.
4. VGA: (Optional Slot) Connects monitor, 800x600 max pixel resolution, via VGA connection.
5. DMX IN: Connects and receives DMX signal from any universal DMX console (Receives Data Only).
6. DMX OUT:
  - Port A: Outputs DMX signal for DMX Base Playback only (Recorded programs from an external control source).
  - Port B: Outputs DMX signal for all data patched and programmed in your TRIO.

### 3.7 Manual Conventions

The following terms and conventions are used throughout this manual:

- Keys are presented using their exact spelling and capitalization and surrounded by brackets (i.e. press the [1-24] key).
- Activate is used with keys that toggle between two values or functions and means place the control in its active state.
- Deactivate is used with keys that toggle between two values and means place the control in its non-active state.
- Select describes pointing to and clicking a button or checkbox (on a software screen) such that it is activated. This allows a single instruction to describe this action without knowing the control's previous state. For example, if the control is not selected, clicking the control once selects it. If it is already selected, no action is required.
- Highlight describes the outlining of selected text or files with a colored border to make it stand out. For example, **this text is highlighted**. Text may be highlighted by clicking and dragging the cursor across the portion desired.

This manual is Copyright © 2010 Elation Professional. All rights reserved. No part of the manual included with this product can be reproduced or transmitted in any form, by any means, for any purpose without prior written authorized permission.

Information contained in this manual is subject to change at any time and without notice. Please contact Elation Customer Service or visit [www.elationlighting.com](http://www.elationlighting.com) for the latest manual revisions.

## 4. Operation

### 4.1 Single Scene Mode:

When you power the unit on, the LCD will show you.

| Single Scene | Fade A |
|--------------|--------|
| 01:          |        |
| 13:          |        |
| 25:          | Fade B |
| 37:          |        |
| Master:xxx   |        |

#### 4.1.1 Single Scene Crossfading

A crossfade allows one scene to fade out while another scene fades in.

In Single Scene Mode, when “NEXT” is active, the Trio will function like a single scene crossfading console. Crossfade times can be preset or manually set on the fly.

1. Activate Single Scene Mode, green backlite key will indicate that it is active. Activate A and B Preset Faders to their top position. Activate the Grand Master fader to its top position. Activate the “Next” key- red backlite key will indicate that it is active. Adjust the Channel Faders (1-24) to set the Channel values as desired for your first Scene. Those channels should now be active.

2. Activate A and B Preset Faders to their bottom position. Previously set channels will remain active. Adjust Channel Faders (1-24) to set the Channel values as desired for your next Scene.

3. Activate A and B Preset Faders to their top position, at the rate that you want your new scene to fade in at. Your previous scene should fade out while your new scene fades in. See section 4.1.2 “Fade A and Fade B Settings” to preset Cross fade times.

4. Repeat steps 1-4 to continue using the Crossfade “Next” function. To exit the “Next” function, Activate A and B Preset Faders to their top position and deactivate the “Next” key.

#### \*Note:

1. In Single Scene (yellow backlite key), Two Scene (yellow backlite key) and Submaster modes (red backlite key), one or more channel bump/scenes can be set active based on the Flash Level fader setting. To do so, while in one of the forementioned modes, hold down the bump button or buttons for channels or scenes that you want active. Then activate one of the other two modes. The selected channels will remain active while all other channels or Submasters can be bumped or activated. While the Single and Two scene indicator’s are yellow, all function keys are void except for the grandmaster.

2. There are two ways to switch to Single Scene mode from any of the other Modes:



#### 2.1 Crossfade

-Crossfade allows the user to transition smoothly between the current working mode to Single Scene. Activate the Single Scene key- the yellow indication Insert means the current fader settings are still in the previous scene. By activating the A and B Preset Faders bottom to top, the indicator will now be green and the user will not be working in Single Scene Mode.



#### 2.2 Shortcut

-This method allows the user to transition quickly from the current working mode into

Single scene mode. Activate the Single Scene key once to change the indicator to yellow which means the console is running on the current fader settings. Activate the Single Scene key a second time to switch to Single Scene mode-indicated by the green backlight.

#### 4.1.2 Fade A and Fade B Settings

1. Activate Softkey A to choose and highlight "Fade A".

|              |              |        |   |
|--------------|--------------|--------|---|
| MENU         | Single Scene | Fade A | A |
| CLEAR BUFFER | 01:          |        | B |
| DMX BASE     | 13:          |        | C |
|              | 25:          | Fade B |   |
|              | 37:          |        | D |
| FX           | Master:xxx   |        |   |

2. Adjust Step Rate fader to set the Fade time for Preset A.

3. Deactivate Softkey "A".

-Just as above, Activate Softkey C to choose and highlight "Fade B" and set a desired fade time using the Step Rate fader.

#### 4.2 Two Scene Mode

1. When Two Scene Mode is entered by pressing the Two Scene key, the LCD Screen will show this display:

|              |            |         |   |
|--------------|------------|---------|---|
| MENU         | Two Scene  | Fade A  | A |
| CLEAR BUFFER | 01:        |         | B |
| DMX BASE     | 13:        |         | C |
|              | 25:        | Fader B |   |
|              | 37:        |         | D |
| FX           | Master:xxx |         |   |

The Channel Faders on the page represent Scene A and Scene B

Faders 1-12 control Scene A

Faders 13-24 control Scene B

When Preset A and B Faders are in the Top position, the LCD will perform Scene A and Fade out of Scene B. When the Preset A and B Faders are in the bottom position, the LCD will perform Scene B and fade out of Scene A.

Pushing A and B Preset Faders simultaneously allows smooth transition between Scenes.

2. If it is desired to switch into Two Scene Mode from another work mode, the user may do so in the same fashion as Single Scene Mode.

2.1. CrossFade

2.2. Shortcut

-Refer to the details in Single Scene Mode.

### 4.3 SubMaster Mode

When SubMaster mode is activated, the LCD Screen will show this display:

|              |                          |             |   |
|--------------|--------------------------|-------------|---|
| MENU         | SubMaster Mode           | Assign Fade | A |
| CLEAR BUFFER | 01:<br>13:<br>25:<br>37: | Fade A      | B |
| DMX BASE     |                          | Fade B      | C |
| FX           | P:01 Record Sub          |             | D |

In this mode a total of 1152 Submasters are available - 24 pages x 48 Submasters per page.

#### 1. Recording Submasters

Submaster Mode allows you to record a scene or look into each fader.

1.1 To record a Submaster, the console must either be in Single Scene Mode or Two Scene Mode. While in either Single Scene or Two Scene Mode, the Submaster is created by the faders being adjusted in either of these modes, then switching into Submaster Mode to then record and play the Submaster.

-Refer to the Record Function Section for details.

#### 2. Submaster Pages

To change Submaster pages, hold down the SubMaster key. The LCD will show you the current page. Use the Bump Buttons to select the desired page.

|              |                          |             |   |
|--------------|--------------------------|-------------|---|
| MENU         | SubMaster Mode           | Assign Fade | A |
| CLEAR BUFFER | 01:<br>13:<br>25:<br>37: | Fade A      | B |
| DMX BASE     |                          | Fade B      | C |
| FX           | SubMaster pg:08          |             | D |

-Any recorded Submasters on each page will display red (half intensity) on the Bump Buttons

#### 3. Assigning Fade Time for a SubMaster

|              |                          |             |   |
|--------------|--------------------------|-------------|---|
| MENU         | SubMaster Mode           | Assign Fade | A |
| CLEAR BUFFER | Xx:<br>Xx:<br>Xx:<br>Xx: | Fade A      | B |
| DMX BASE     |                          | Fade B      | C |
| FX           | SubMaster:xxx pg:xx      |             | D |

##### 3.1 Press the A Key to highlight the Assign Fade Function.

3.2 Hold down the Bump Button of the desired recorded Submaster and adjust the StepRate Fader to modify the Fade Time.


### 4.3.1 Fade A and Fade B Settings

-The user may set the DMX value for both Fade A and B

1. Push Softkey B to choose and highlight Fade A
2. Adjust StepRate Fader to set the Fade Time for Preset A
3. Push Softkey B a second time to erase the selection
4. Repeat above action to set Fade B using Softkey C

Fade A and Fade B can be chosen simultaneously by using the StepRate Fader to set the same FaderTime for Preset A and B.

If the user wants to switch into Submaster Mode from another work mode, the console will keep the current fader settings as the background scene. If the user wants to cancel the current fader settings, simply press the Clear Buffer key to release the fader settings.

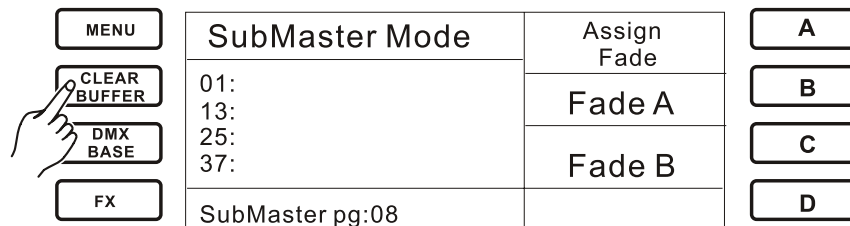


### 4.3.2 Crossfade in Submaster



The user may Crossfade in Submaster Mode. Begin by setting Preset A and B Faders in the bottom position.



Move the Preset A and B to the top position- the first recorded bump indicator will blink yellow.

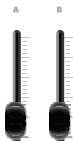

Move the Preset A and B faders toward the bottom position to fade in the first Scene - the first recorded fade stop blinking as the scene fades in.

### Additional Information for Crossfading:

1. To stop a crossfade, move only the Preset A Fader down and then back up. This will fade out the last output scene.
2. Changing the Work mode will also stop the crossfade immediately and take out the last fade.
3. Any empty Submasters, Submasters with effects or Submasters that already have a level will be ignored. Example: If any of the Submasters are already in the up position (output), the sequential crossfade will start from the scene immediately after the highest outputting fader (i.e. If fader 1, 3, and 5 are up, the crossfade will start from scene 6.)
4. The LCD will show the fader percentage values for both the fade in and fade out as the fade is occurring.

### 4.3.3 Record Function

#### 1. Record a Submaster

To record a Submaster the console must be in either Single or Two Scene mode in order to adjust fader levels.

1.1 Push Record Key to illuminate the Record indicator. If the Channel is blank the bump button for that channel will flash. If the Submaster is recorded on that channel, the Bump will black out.

1.2 Adjust the StepRate fader to set the Fadetime for the Submaster

1.3 To assign the Submaster to a Bump, push the Bump key that is desired to contain the Submaster.

|              |                          |          |   |
|--------------|--------------------------|----------|---|
| MENU         | Record SubMaster         | Del Sub  | A |
| CLEAR BUFFER | 01:<br>13:<br>25:<br>37: | Del Page | B |
| DMX BASE     |                          | Del All  | C |
| FX           | Pg08 Record sub          | Exit     | D |

-Repeat actions for additional Submaster recordings

After the Submaster is recorded, the indicator will illuminate red and the Record key will black out.

Also while in Submaster Record mode, the user may select the functions “Del Sub”, “Del Page”, or “Del All”.

Press the Bump of the Submaster you want to Delete. Press the A key to choose “Del Sub” as the LCD screen shows you below. Press A to to confirm “Yes” or C to exit.

|              |                          |     |   |
|--------------|--------------------------|-----|---|
| MENU         | Del Pg08 Subxx?          | Yes | A |
| CLEAR BUFFER | 01:<br>13:<br>25:<br>37: |     | B |
| DMX BASE     |                          | No  | C |
| FX           | Pg08 Record Sub          |     | D |

To Delete the entire Page, press the B key to choose “Del Page”, as the LCD shows you below. Press A to confirm or C to exit.

|              |                          |     |   |
|--------------|--------------------------|-----|---|
| MENU         | Del Pg:08 ?              | Yes | A |
| CLEAR BUFFER | 01:<br>13:<br>25:<br>37: |     | B |
| DMX BASE     |                          | No  | C |
| FX           | Pg08 Record Sub          |     | D |

To Delete all of the Submaster and Pages, press the C key to choose “Del All” as the LCD screen shows you below. Press A to confirm or C to exit.



|              |                 |     |   |
|--------------|-----------------|-----|---|
| MENU         | Del All Sub ?   | Yes | A |
| CLEAR BUFFER | 01:             |     | B |
| DMX BASE     | 13:             |     | C |
| FX           | 25:             | No  | D |
|              | 37:             |     |   |
|              | Pg08 Record Sub |     |   |

## 2. Record Fx1- Fx12

FX Keys are multi function keys that can be used to store Chases, Trigger Playback in DMX Base, and enter numeral information such as Password.

FX Keys allow the user to program scenes and chases as independent Submasters. They can run regardless of the work mode with 99 Steps max per FX.

To record Fx1- Fx12 the console must be in either Single or Two Scene mode in order to adjust Faders.

2.1 Push the Record key. The Record key will illuminate.

2.2 Push the Fx1- Fx12 that you want to Record. Example: Fx1

2.3 The Fx1 key will illuminate blue. The LCD screen will then display the information for Fx1.

|              |                  |            |   |
|--------------|------------------|------------|---|
| MENU         | Record FxBase    | Del Step   | A |
| CLEAR BUFFER | 01:              | Del FxBase | B |
| DMX BASE     | 13:              | Next       | C |
| FX           | 25:              | Back       | D |
|              | 37:              |            |   |
|              | FX: 01 Sxxx Txxx |            |   |

Sxxx represents the current Step

Txxx represents the total number of Steps

2.4 Press the Step key to record the scene and run Sxxx and Txxx. After the Scene is completed for FX1, press the Step key and the Scene can be recorded to the current Step.

|              |                  |            |   |
|--------------|------------------|------------|---|
| MENU         | Record FxBase    | Del Step   | A |
| CLEAR BUFFER | 01:              | Del FxBase | B |
| DMX BASE     | 13:              | Next       | C |
| FX           | 25:              | Back       | D |
|              | 37:              |            |   |
|              | FX: 01 Sxxx Txxx |            |   |

2.5 If you want to delete/cancel a Step, choose the desired Step using button C (Next) or D (Back). Push the A button (Del Step) to delete the Step.

2.6 To insert a Scene before a Step, use the C (Next) or D (Back) buttons to select the step desired to have the scene precede. Push the Step key to insert the Scene.

|              |                  |            |   |
|--------------|------------------|------------|---|
| MENU         | Record FxBase    | Del Step   | A |
| CLEAR BUFFER | 01:              | Del FxBase | B |
| DMX BASE     | 13:              | Next       | C |
| FX           | 25:              | Back       | D |
|              | 37:              |            |   |
|              | FX: 01 Sxxx Txxx |            |   |

2.7 To adjust the FadeTime and StepTime for an Fx, push the FD/ST Time key. The FD/ST key will illuminate: Red representing FadeTime and yellow representing StepTime. Adjust the StepRate Fader to set the Fade/Step time as desired.

| Record FxBase  | Del Step |
|----------------|----------|
| 01:            | Del      |
| 13:            | FxBase   |
| 25:            |          |
| 37:            | Next     |
| Fade Time:2.00 | Back     |

| Record FxBase   | Del Step |
|-----------------|----------|
| 01:             | Del      |
| 13:             | FxBase   |
| 25:             |          |
| 37:             | Next     |
| Step Time: 7:00 | Back     |

2.8 Push Fx1 again to complete.

2.9 Push Record to exit Record Mode.

### 3. How to Edit a Scene

In Record Fx Mode, push the Key of the desired Fx to be edited. The Bump indicators will illuminate with a flashing red. Push the Fader of the Bumps you want to edit. Push the FD/ST key and its' Fader or StepRate Fader to set your value (Fadetime and Steptime). Push the Step key to Record the value to the current Step. Repeat these actions for any additional Steps desired you want to edit.

|              |                  |          |   |
|--------------|------------------|----------|---|
| MENU         | Record FxBase    | Del Step | A |
| CLEAR BUFFER | 01:              | Del      | B |
| DMX BASE     | 13:              | FxBase   | C |
|              | 25:              |          |   |
|              | 37:              | Next     | D |
| FX           | FX: 01 S001 T001 | Back     |   |

After editing is completed, press the Fx button of the Fx you are working on to record the value. Repeat these actions for all Fx.

### 4. How to Trigger FX

After the recording is complete, the Fx channels that have recorded sequences will illuminate red. Press the Fx Key of the desired Fx- the indicator will illuminate and blink yellow. Press the Go/Stop key to begin the Fx. The Fx key will then blink red and run in sequence (Runstep).

To stop the Fx from running, press the Fx key again. The indicator will blink yellow. Press the Go/Stop key again to stop the sequence and the indicator will return to a solid red illumination.

**\*Note** - A maximum of 12 Chases may run at the same time with 99 Steps per Chase.

### 5. How to Delete Fx

In Record Fx mode, Press the B key to choose Del FxBase. Choose the Fx you wish to Delete by pressing the corresponding Fx key. Press the A key to confirm or the C key to cancel.

|              |                  |          |   |
|--------------|------------------|----------|---|
| MENU         | Record FxBase    | Del Step | A |
| CLEAR BUFFER | 01:              | Del      | B |
| DMX BASE     | 13:              | FxBase   | C |
|              | 25:              |          |   |
|              | 37:              | Next     | D |
| FX           | FX: 01 S001 T001 | Back     |   |

## 6. How to Set EXT Keys

EXT Keys act as direct bump buttons for channels 49 through 52. They can be linked to a conventional fixture, or a fog machine. The user has the option to have the EXT Keys to act as bumps or on/off switches.

EXT Keys cannot be built into a Submaster or a Chase.

When the Channel Setup screen is entered, the user will notice that there are 52 channels set for the dimmers when there are only 48 Faders on the console to control them. The additional 4 dimmers are linked to the EXT Keys. The user has the option to have the EXT Keys to act either as a Bump or on/off switch.

## 7. Recording DMX Base

The Trio-1248 also allows you to record DMX data form an external DMX device to DMX Base- this action is referred to as DMX Base Record.

In “Record Submaster” Mode, press DMX Base” and press any Fx1-Fx12 key. This will switch the console into “Record DMXBase” mode.

|              |                 |             |   |
|--------------|-----------------|-------------|---|
| MENU         | Record DmxBase  | BBT Record  | A |
| CLEAR BUFFER | A: BBT RECORD   | DMX Record  | B |
| DMX BASE     | B: DMX RECORD   | Delete Base | C |
| FX           | C: DEL BASE     | Del All     | D |
|              | D: DEL ALL BASE |             |   |
|              | Record Key:EXIT |             |   |
|              | Pg08 Record sub |             |   |

### BBT Record:

BBT stands for “Blackout Blackout Technology”. This was created so chase/show sequences would loop seamlessly. The idea is to write a blackout step at the beginning of a chase or show and a blackout step at the end of the chase or show so the controller will automatically recognize the blackout steps and will loop the chase or show seamlessly on playback.

The user only needs to use the BBT Record function if using an external console to record a Chase into the Trio-1248. The user must make sure to insert a blackout at the beginning and the end of the Chase.

|              |                                 |     |   |
|--------------|---------------------------------|-----|---|
| MENU         | BBT Record Sel.                 | Yes | A |
| CLEAR BUFFER | Yes: Will Cancel other function |     | B |
| DMX BASE     | No: Exit                        | No  | C |
| FX           | Free space : 51200k             |     | D |
|              | Pg01 Record sub                 |     |   |

Press the A key to confirm

Press the C key to Exit

### DMX Record:

To choose DMX Record, Press the A key to confirm, then Select “Start”. The console will then begin recording all the DMX information.

### Delete Base:

Used to delete a single DMX Base file.

### Del All:

Used to delete all DMX Bases data.

## 4.4 ML Mode (Moving Light)

### 4.4.1 Concept

A maximum of 12 Moving Lights can be controlled by the Trio-1248. A maximum of 40 attributes for each moving light and a maximum of 512 channels of DMX output can be assigned.

A maximum of 20 Playback can be recorded with 99 Steps for each Playback. Each Step has its own FadeTime and WaitTime

The Bank of the moving light is saved at: TRIO1248/FLIB. The first level is the file of the moving light manufacturer. The second level is the file of the moving light from the manufacturer.

### 4.4.2 Menu

In ML Mode, press the Menu key and the LCD will display:

|              |               |               |   |
|--------------|---------------|---------------|---|
| MENU         | Fixture Menu  | Fix Patch     | A |
| CLEAR BUFFER |               | Channl Set Up | B |
| DMX BASE     |               | Record Group  | C |
| FX           | B:249 T:----- | Next          | D |

#### 1. Patching Moving Light Fixtures

Each ML fixture needs to be assigned to a preset fader on the console. This makes it easier to control each specific fixture.

The bottom fader and the buttons below them are called the handle for the fixture because it is used to control the fixture. The fader will control the intensity of the fixture and the button is used while programming to select the fixture.

You must also specify what type of fixture is allocated to each handle. Once you have entered this information, the console can tell you the DMX address to set on your fixtures to match the settings it is using.

This setup process is called Patching.

You can Patch up to 12 fixtures on the Trio-1248.

#### 1.1 Patching Moving Light Fixtures

A Moving Light can have many attributes such as pan, tilt, color, gobo etc.

The Trio-1248 has personality files available for most fixtures in the lighting world. Both these and the latest software are available on [elationlighting.com](http://elationlighting.com) on the Trio-1248 page. The user must upload these files with a USB Flash Drive.

The Trio-1248 will automatically recognize the personality profiles as previously named. Due to this fact the user should never rename the profile as this will render the console unable to recognize and retrieve the profile.

The user may patch a fixture by following the steps below.

-Make sure you have inserted a USB Flash Drive with the fixture profiles stored on it.

-Press Menu and the LCD will display:

|              |               |               |   |
|--------------|---------------|---------------|---|
| MENU         | Fixture Menu  | Fix Patch     | A |
| CLEAR BUFFER |               | Channl Set Up | B |
| DMX BASE     |               | Record Group  | C |
| FX           | B:249 T:----- | Next          | D |

-Press the A key to choose “Fix Patch”

-The console will read the moving lighting files of each manufacturer from the USB disk.

-Use “More” or “Back” to select the moving light you desire. Press D to choose “Enter” for confirmation of your selection.

-The LCD will show you the name and patched DMX address of the fixture. If you want to modify the assignment of the DMX address, you can use Fx1-Fx10 to change the address. The Fx10 means 0 and the Fx1-Fx9 means 1 through 9 in order.

-To Patch a single Fixture, press a handle Bump button. To Patch a range of Fixtures, hold down the Bump button for the first fixture in the range. Press the last Bump button in the range. The range of fixture will be patched to the same DMX address.

-Repeat the above steps to patch any additional Handles.

## 1.2 Editing and Recording various Scenes for a patched Moving Light.

The Trio-1248 allows you to edit and record various scenes for a patched moving light. You may set the Pan, Tilt, Speed, Color and Attribute for it.

1.2.1 In ML Mode, Press the Record button.

1.2.2 Press a bump that has a Moving Light patched into it(ex. Bump1). The indicator will illuminate red and the LCD will display the Moving light you have patched.

1.2.3 Press the bump of the channel you want to record the scene in. Use its fader to control the patched moving light in the Bump. Select “Playback 1”- it will blink red. The LCD will display:

|              |                 |             |   |
|--------------|-----------------|-------------|---|
| MENU         | Record Playback | Focus Group | A |
| CLEAR BUFFER | Pan: 128        | Group       | B |
| DMX BASE     | Tilt: 128       | Attrib      | C |
| FX           | Color: 000      | Next        | D |
|              | Dimmer: 200     |             |   |
|              | Cyan: 000       |             |   |
|              | PL:01 S000 T000 |             |   |

1.2.4 Press the D key to select Next, and then the Shape

|              |                 |        |   |
|--------------|-----------------|--------|---|
| MENU         | ML Shape        | Circle | A |
| CLEAR BUFFER | Pan: 128        | Figure | B |
| DMX BASE     | Tilt: 128       | Fan    | C |
| FX           | Color: 000      | Stop!  | D |
|              | Dimmer: 200     |        |   |
|              | Cyan: 000       |        |   |
|              | PL:01 S000 T000 |        |   |

1.2.5 Press the A key to select circle. Then select Next.

|              |                  |       |   |
|--------------|------------------|-------|---|
| MENU         | Circle           | Speed | A |
| CLEAR BUFFER | Canter Pan: 255  | Run   | B |
| DMX BASE     | Center Tilt: 255 |       | C |
| FX           | Radius: 25       | Back  | D |
|              | PL:01 S000 T000  |       |   |

1.2.6 Push the fader of “Pan” and “Tilt” to adjust the value

1.2.7 Press the A key to select “Speed”. Then adjust the StepRate Fader to the Speed value. Press the B key to have it Run

1.2.8 Press Menu to return to the Record Playback interface.

Press the D key to select “Attrib”.

|                 |                 |         |   |
|-----------------|-----------------|---------|---|
| MENU            | ML Attribute    | Cyan    | A |
| CLEAR<br>BUFFER | Pan: 128        | Magenta | B |
| DMX<br>BASE     | Tilt: 128       | Yellow  | C |
| FX              | Color: 000      | More    | D |
|                 | Dimmer: 200     |         |   |
|                 | Cyan: 000       |         |   |
|                 | PL:01 S000 T000 |         |   |

1.2.9 Press the soft key A-B to select the attribute you desire. Press the Playback 1 to assign these settings as Step 1.

1.2.10 Repeat the above action to complete any additional Steps

1.2.11 After you are finished adding Steps, press Record to record the settings for the Moving Light patched in to a Bump.

Likewise, this method can be used to edit and record Scenes for other patched Moving Lights or to assign a different Fader to control a patched Moving Light.

**\*Note:** Make sure the operation interface is in “Record Playback” prior to recording any value as a Step (by pressing Menu button). Otherwise, it is void when you try to press “Playback” bump to set a chase step.

## 2. Using Groups

If you have several units of one fixture type, you often want to select them all at the same time. To avoid excessive Bump button use, the Trio-1248 allows you to put fixtures into groups which you can use to select all fixtures by typing the group Bump.

### 2.1 Making A Group

You may make a Group by following these steps:

- Select the Fixture you want to put into the Group
- Press Menu, then the C key to choose “Record Group”
- The Bump 1-12 will indicate the recording state for the group. The blue blinking means the Bump is blank. The Blackout Bump indicates it already has recorded content in it.
- Press Bump 1-12 to assign the Group.

### 2.2 Selecting a Group of Fixtures

Once you have created a Group, you can quickly select all of the fixtures in the group.

- In ML Mode, press the B key to highlight “Recall Group”.

|                 |                |                 |   |
|-----------------|----------------|-----------------|---|
| MENU            | ML Mode        | Focus           | A |
| CLEAR<br>BUFFER |                | Recall<br>Group | B |
| DMX<br>BASE     |                | Attrib          | C |
| FX              | Fade Time:24.0 | Shape           | D |

-Bump LED will indicate the recorded groups by blinking blue.

-Press the related Bump. The Fixture that was recorded in the Group will be selected and the others will not be selected.

## 2.3 Deleting

The Trio-1248 allows the user to delete the collocated Moving Light and recorded Chase.

### 2.3.1 Delete Fix

-In ML Mode, Press the Menu key. Choose Next and then Delete

-To choose Delete Fix, the Trio-1248 gives you the option to delete a single Fixture or All Fixtures.

-Choose Delete One to delete a single fixture. The LCD shows “Press a Preset <Bump> to Delete.”

-Choose “Yes” to confirm the delete, choose “No” to exit.

-Choose “Delete All” to delete all of the recorded Chases

-Choose “Yes” to confirm, choose “No” to exit

### 2.3.2 Delete Chase

-In ML Mode, press Menu, choose Next and then Delete.

-To choose Delete Chase, the Trio-1248 gives the user the option of deleting a single Chase or all Chases.

-Choose Delete One to delete a single Chase. The LCD will show “Press Playback <Bump> to Delete.”

-Choose Delete All to delete all recorded Chases

-Choose Yes to confirm, choose No to exit.

## 2.4 List Fix

The List Fix function will help the user to easily view the collocated fixtures and the corresponding DMX address.

-In ML Mode, press Menu, choose Next and then choose List Fix

-The LCD will show you the name of the collocated Fixtures in their DMX Address.

## 2.5 Auto DMX

This function will auto sort the DMX address in sequence for those collocated Fixtures.

- In ML Mode, press Menu, choose Next and then choose Auto DMX
- Choose Yes, the Moving Lights will sort in sequence
- Choose No to exit

## 3. Controlling Fixtures

### 3.1 Selecting Fixture

Select the Fixtures that you want to control using the bump buttons. You can select fixtures individually or several at a time. You can control fixtures directly with the fader control of the bump. The value is the exact figure of the Fader. The attribute of Pan, Tilt, and Color for the Moving Light is controlled by the Pan, Tilt, Color Faders. The other attributes of the Moving Light should be selected by softkey. While the Fader is pushed upward the value is increased, and when the Fader is pushed downward the value is decreased. If you press the Bump (of Pan, Tilt...) to hold the output value, the value will not change while adjusting the Fader.

### 3.2 Selecting the other Attributes of Moving Light

- In ML Mode, press the Bump button that the desired Moving Light fixture is allocated to.
- Press the related softkey to assign attributes to the Attribute Fader. Adjust the Attribute Fader to control the Attribute value.

|                 |                |        |   |
|-----------------|----------------|--------|---|
| MENU            | ML Attribute   | Gobo   | A |
| CLEAR<br>BUFFER | Pan: 000       | On/Off | B |
| DMX<br>BASE     | Tilt: 000      |        | C |
| FX              | Color: 001     |        | D |
|                 | Dimmer: 001    |        |   |
|                 | Gobo: 001      |        |   |
|                 | Fade Time:24.0 | More   |   |

### 3.3 Using the Clear Buffer key in ML Mode

While the user sets channel values of a Moving Light, the console provides a space for its channel information. This is called the “Scene Buffer”. If the user wants to clear up the channel information, the ClearBuffer key should be used to clear it. It is recommended that the CLEAR BUFFER key pressed after each scene has been saved to a playback.

## 4. Preset Palette

When controlling a fixture, you may find that you frequently use specific positions, colors, gobos, etc. Like an artists palette, your console allows you to recall them. There are 10 pages of 10 palette entries. The Preset Palettes must be created in the Trio Profile creator program. When your fixture is patched to your Trio, all palette information will also load.

### Recalling a Palette Value

Select the fixture to be changed. Shared palettes can be set to all fixture of the same type.

- In ML Mode, press the Bump button in which you have allocated the ML fixture to.
- Press the A key to choose Preset Pallet. The LCD display will show:



|                 |  |               |   |
|-----------------|--|---------------|---|
| MENU            | <b>ML Palette</b><br>Pan: 128<br>Tilt: 000<br>Color: 230<br>Dimmer: 164<br>Gobo: 000<br>Fade Time:24.0 | 01.<br>Colors | A |
| CLEAR<br>BUFFER |  | 02.<br>Gobos  | B |
| DMX<br>BASE     |  | 03.<br>Positi | C |
| FX              |  | More          | D |
|                 |  |               |   |

-Now press the related softkey A-D to choose the Palette you wish to select.

## 5. Shape

Your console has a shape generator. It allows you to quickly create exciting light shows using many movements and changes with a minimal amount of programming.

A shape is simply a sequence of values which can be applied to any attribute of a fixture. A “circle” shape, for example, applied to the Pan and Tilt attributes, would cause the fixture to move its beam around in a circular pattern. You can set the center point of the circle, the size of the circle and the speed of the movement.

### 5.1 Selecting a Shape

In ML Mode, when you choose a Shape, it will be applied to all selected fixtures.

-Select the fixture that you want to apply a shape to

-Select Shape

-The LCD will display:

|                 |  |        |   |
|-----------------|--|--------|---|
| MENU            | <b>ML Shape</b><br>Pan: 128<br>Tilt: 000<br>Color: 230<br>Dimmer: 164<br>Gobo: 000<br>Fade Time:24.0 | Circle | A |
| CLEAR<br>BUFFER |  | Figure | B |
| DMX<br>BASE     |  | Fan    | C |
| FX              |  | Remove | D |
|                 |  |        |   |

-Select Stop, this will stop all running movements:

-Select Circle, the LCD will display:

|                 |  |                |   |
|-----------------|--|----------------|---|
| MENU            | <b>Circle</b><br>Center Pan: 128<br>Center Tilt: 000<br>Radius: 25<br>Fade Time:24.0 | Radius<br>UP   | A |
| CLEAR<br>BUFFER |  | Radius<br>Down | B |
| DMX<br>BASE     |  | CW             | C |
| FX              |  | NEXT           | D |
|                 |  |                |   |

“Center Pan”: the center value of Pan when the moving light runs its shape.

“Center Tilt”: the center value of Tilt when the Moving Light runs its shape.

CW” and “CCW”: the direction of the shape. CW=Clockwise, CCW=Counter Clockwise

“Speed”: the speed that the moving light runs its shape.

“Run”: to start the shape.

-Select Fan, then select Wave. The LCD will display:

|              |   |           |   |
|--------------|---|-----------|---|
| MENU         | <b>Wave Move</b><br>Center Pan: 128<br>Center Tilt: 000<br>Pan Radius: 25<br>Tilt Radius: 25<br>Wave Number: 25<br>Master:237 | PanRD Up  | A |
| CLEAR BUFFER |   | TiltRd Up | B |
| DMX BASE     |   | CW        | C |
| FX           |   | Next      | D |

“Pan Radius”: the radius of the Pan. Adjustable between 01-45.

“Tilt Radius”: the radius of the Tilt. Adjustable between 01-45.

“Wave Number”: how many waves will be driven. Maximum # of 12 waves.

-Select “Figure”. this represents a figure 8 movement.

The LCD will display:

|              |   |             |   |
|--------------|---|-------------|---|
| MENU         | <b>Figure8</b><br>Center Pan: 128<br>Center Tilt: 000<br>Radius: 25<br>Fade Time:24.0 | Radius UP   | A |
| CLEAR BUFFER |   | Radius Down | B |
| DMX BASE     |   | CW          | C |
| FX           |   | NEXT        | D |

## 6. Playback

### 6.1 Programming a Chase

To program a chase, you have to set up the lighting for each step of the chase, then save it. The contents of the programmer are recorded as a step.

- Select Record
- Blank Playbacks will blink red. A programmed Playback will be off.
- Press the bump button of the playback where you want to store the chase.
- Set your scene for the Step.
- Set Fade time and Step time for the step by using the “FD/ST” key and “Step Rate Fader”.
- Press the Bump button of the playback to store the programmer contents as step 1 of the chase.
- Press the ClearBuffer (unless you want to re-use the contents of the programmer), then repeat step 4-6.
- Press Record to finish when you have stored all your desired steps. (99 max steps allowed)

#### **\*Note**

- Press ClearBuffer when you have finished saving the Chase. Otherwise, when you try to play back, the programmer will include previously set values and you won't see the chase properly.
- There are up to 99 Steps in a Chase.

## 6.2 Running a Chase


To run a chase, raise the fader of the playback to its top position. The chase will start to run.

- The HTP (intensity) channels in the chase will be controlled by the Fader. The other channels (LTP) will be set as soon as the fader moves above zero according to the LPT fader times programmed in the chase. You can set the point at which the LPT channels activate from the Fixture Library File.
- To stop a chase, pull the Fader back down to zero. The chase will stop and the user can manually control the Chase Steps.
- When running the Playback, pressing the corresponding Bump will cause it's indicator to turn yellow.
- Pressing Step will cause the Chase to run Step by Step
- Pressing the corresponding Bump an additional time will erase the manual control

## 7. Pan/Tilt Invert

In Fixture Menu, the Pan/Tilt of a moving light may be changed between Normal and Invert.

Prior to setting the Pan/Tilt Invert, it is required to select an allocated Moving Light.

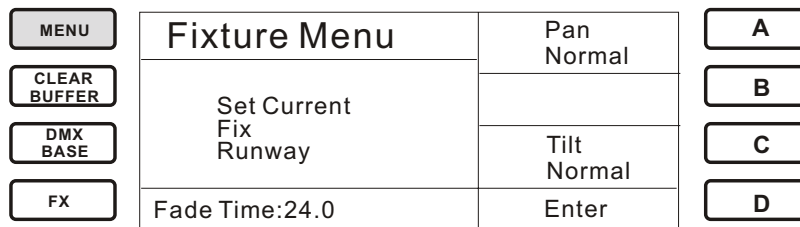


- Press the Bump button that you have allocated with a Moving Light.
- Press B to select "Pan/Tilt Invert", the LCD shows the above figure.
- Press A to change between Pan Normal and Pan Invert.
- Press C to change between Tilt Normal and Tilt Invert.
- Press D to select Enter and confirm settings.
- Press Menu to return to the previous menu.


Once you complete the settings for Pan/Tilt Invert, push the Pan/Tilt fader up or down, the Moving Light will react as you set it.

## 4.5 LED Mode

Similar in operation as in ML mode, LED mode allows for much of the same operation. Your console is able to control a max of 12 LED (RGBA) fixtures.

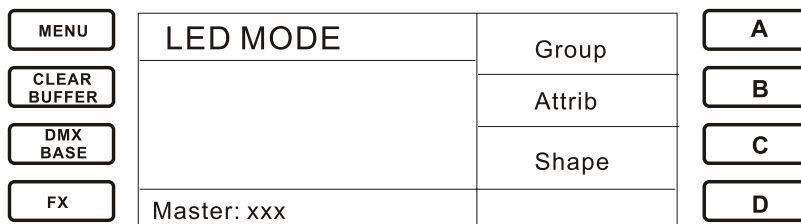

Press the Menu button, the LCD screen shows you:

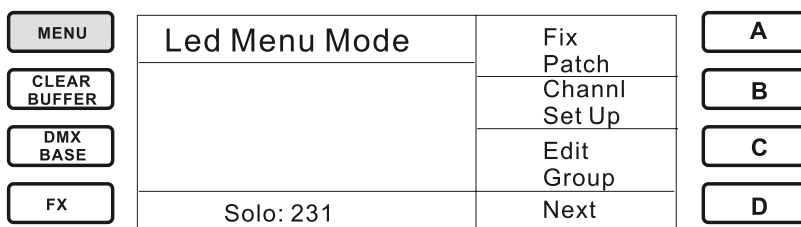

### 4.5.1 Fix Patch

An LED fixture can have many attributes, such as Red, Green and Blue control channels.

You must first load your profiles from a USB Flash Drive that contains the files obtained from [elationlighting.com](http://elationlighting.com).

The user may patch a fixture according to the following steps:

- Make sure you have inserted the USB Flash Drive with files already loaded onto it.
- Press A to choose "Fix Patch".
- The console will read the LED files of each manufacturer from the USB device
- Use "More" or "Back" to select the LED you desire
- Press D to choose "Enter" for confirmation of the selection

The LCD will show you the name and auto patched DMX address for the fixture. If you want to modify the assignment of the DMX address, you can use FX1-FX10 to change the address. The FX10 means 0 and the FX1-FX9 means 1-9 orderly.

To patch a single fixture, press a desired bump button. To patch a range of fixtures, press and hold down the bump button for the first fixture in the range, then press the last bump button in the range then release both bump buttons simultaneously. The fixtures will be patched to all locations between the selected bump buttons with sequential DMX addresses.

Repeat the above steps to patch additional fixtures.

### 4.5.2 Channel Set Up

The Channel Set Up option allows the user to softpatch the start and end DMX address for Dim (dimmer channels), LED and Moving Lights fixtures.

|                 |                               |       |   |
|-----------------|-------------------------------|-------|---|
| MENU            | Channel Set Up                | Up    | A |
| CLEAR<br>BUFFER | Start   End<br>Dim: 001 > 094 | Down  | B |
| DMX<br>BASE     | Led: 103   199                | <     | C |
| FX              | ML: 226   512                 | Enter | D |
|                 | Solo: 231                     |       |   |

- Use ">" to move the cursor to the parameters you want to modify.
- Use "Up" or "Down" to gradually set the corresponding value.
- Use "Flash Level Fader" to change the corresponding value rapidly.
- Choose "Enter" to save your settings and exit.

### 4.5.3 Using Groups

Your console is able to store up to 12 groups. If you have several fixtures of the same type, you often want to select them all at the same time. To avoid excessive use of the Bump buttons, the console allows you to put fixtures into groups.

#### Making a Group

Make a Group by following these steps:

- Select the Fixtures that you want to put into a group.
- Press the Menu button, then Press C to choose "Edit Group"
- Bump buttons 1-12 will indicate the recording state for the Group. Blue blinking keys indicate the group is blank, a non blinking key indicates that the bump contains a group.
- The LCD prompts you with "Record Group Select a Bump as a Group". Press any one of the bumps (1-12) to store your group.

#### Selecting a group of Fixtures

Once you have created a Group, you can then quickly select all of the fixtures in the Group.

- In LED Mode, press A to highlight "Group".

|                 |           |        |   |
|-----------------|-----------|--------|---|
| MENU            | Led Menu  | Group  | A |
| CLEAR<br>BUFFER |           | Attrib | B |
| DMX<br>BASE     |           | Shape  | C |
| FX              | Solo: 231 |        | D |

- Bump LED's, with groups stored, will light in blue.
- Press the related bump button which contains the group that you want selected.


### 4.5.4 Delete

The console allows the user to delete the collocated LED fixture and Recorded chases.

#### Delete Fix

- In LED Menu Mode, choose Next and then choose Delete.

-Choose “Delete Fix”, the LCD shows:

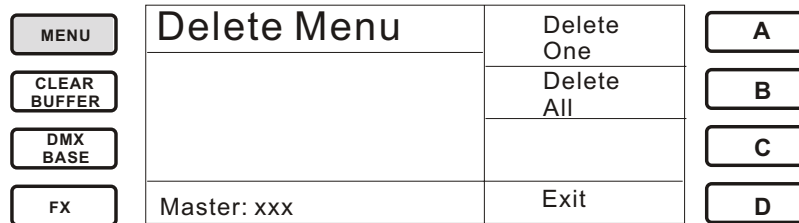

-Choose “Delete One” to delete a single fixture. The LCD displays: “Press a preset <Bump> to Delete”.

-Choose “Yes” to confirm the delete. Choose “No” to exit.

-Choose “Delete All” to delete all patched LED fixtures.

-Choose “Yes” to confirm the delete. Choose “No” to exit.

### Delete Chase

-In LED Menu Mode, choose Next and then choose “delete” to Delete a chase.

-Choose “delete one” to delete a single chase, the LCD will display: “Press playback <Bump> to Delete”.

-Choose “Yes to confirm deletion. Choose “No” to exit.

-Choose “delete all” to delete all recorded chases.

-Choose “Yes” to confirm the deletion. Choose “No” to exit.

### 4.5.5 List Fix

The “List Fix” function will help the user to easily view the collocated fixtures and the corresponding DMX address.

-In LED Menu Mode, choose next and then choose List Fix.

-The LCD will show you the name of the collocated Fixtures and their DMX addresses.

### 4.5.6 Auto DMX

When using this function, the console will auto sort the DMX address in sequence for those collocated fixtures.


-In LED Menu Mode, choose Next and then choose Auto DMX.

-Choose “Yes”, all fixtures will sort in sequence.

-Choose “No” to exit.

### 4.5.7 Using Shape

In LED Mode, press C to choose “shape”, the LCD screen shows you:

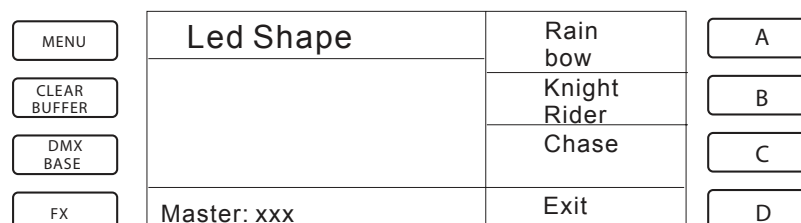

Press A to choose “Rainbow”, the LCD shows you:

|              |                    |           |   |
|--------------|--------------------|-----------|---|
| MENU         | <b>Rain Bow</b>    | Item Set  | A |
| CLEAR BUFFER | 1:Color Number[10] | DirBy Set | B |
| DMX BASE     | 2: Color Size [10] | Color Set | C |
| FX           | 3: Speed: -----    | Run       | D |
|              | 4: Direct: Left    |           |   |
|              | Master: xxx        |           |   |

-”Color Number” allows you to select the color library in the range of 1-10. Press A (item set) to highlight “1: Color Number”, then press FX1-10 to choose the color type from 1 to 10.

-”Color Size” allows you to set the distance between 2 colors in the range of 1-10. Press A (item set) to highlight “2:Color Size”, and press FX1-10 to choose the size from 1-10.

-The “Speed” can be set by means of StepRate. Press A (item set) to highlight “3:Speed”, then push Step Rate to set the speed value.

-The “Direct” (Direction) can be swapped between “Left” and “Right”. Press B to select the Direct as Left or Right.

-Press D to select “Run” or “Stop”.

In this mode, your console allows you to preset the value for the color you have selected. Press C to choose “Color Set”, the LCD will display:

|              |                     |       |   |
|--------------|---------------------|-------|---|
| MENU         | <b>Color Select</b> | Back  | A |
| CLEAR BUFFER | 01:ALICEBLUE        | Next  | B |
| DMX BASE     | 02: ANTIQUEWHITE    | More  | C |
| FX           | 03: AQUA            | Enter | D |
|              | ColorLib[01]        |       |   |
|              | R255 G000 B000      |       |   |
|              | Master: xxx         |       |   |

-There are a total of 57 color types available for selection in each Color Library. If you do not like the present color type, you can press the C key to choose additional color types.

-Also, if you are not satisfied with the configuration of RGB, you can push the Red, Green and Blue faders to set your desired color.

-Press FX1-FX10 to select ColorLib 1-10.

-The selected color will output to your LED fixture.

-Press D to select “Enter” and confirm your settings.

#### 4.6 Memory Playback Mode

Memory Playback is a combination Submaster, ML and LED programs.

Bumps 1-12 correspond to Submasters- a total of 12 pages

Faders 13-20 correspond to ML and LED playbacks.

If the user wants to enter into Memory Playback Mode from the other modes, The LCD will prompt you to Confirm Playback Mode:

|                 |                                |     |   |
|-----------------|--------------------------------|-----|---|
| MENU            | Single Scene                   | Yes | A |
| CLEAR<br>BUFFER | Are You Sure<br>Into Playback? |     | B |
| DMX<br>BASE     |                                | No  | C |
| FX              | Master: xxx                    |     | D |

Press A to choose “Yes”, the unit goes into Playback Mode. The console will release all DMX output.

|                 |                          |                |   |
|-----------------|--------------------------|----------------|---|
| MENU            | Mem PlayBack             | Assign<br>Fade | A |
| CLEAR<br>BUFFER | SubMaster Page:<br>[003] | Page<br>UP     | B |
| DMX<br>BASE     |                          | Page<br>Down   | C |
| FX              | Master: xxx              |                | D |

Press C to choose “No”, the unit will continue to function in its current state.

|                 |                          |                |   |
|-----------------|--------------------------|----------------|---|
| MENU            | Mem PlayBack             | Assign<br>Fade | A |
| CLEAR<br>BUFFER | SubMaster Page:<br>[003] | Page<br>UP     | B |
| DMX<br>BASE     |                          | Page<br>Down   | C |
| FX              | Master: xxx              |                | D |

When in Mem PlayBack Mode, you may exit by pressing any of the other work modes that you wish to go into. The LCD will prompt “Exit Playback? and Into....” as indicated below.

|                 |   |     |   |
|-----------------|---|-----|---|
| MENU            | Mem PlayBack  | Yes | A |
| CLEAR<br>BUFFER | Are You Sure<br>Exit<PLAYBACK?><br>Into<br><Single Scene> |     | B |
| DMX<br>BASE     |   | No  | C |
| FX              | A:000 T:-----   |     | D |

Press A to choose “Yes”, the unit will go into the selected work mode.

Press C to choose “No”, the unit will continue to function in Mem Playback Mode.



In Mem Playback mode, the “Assign Fade” is used to set the fade time for the Submaster.


1. Press A to highlight “Assign Fade”.
2. Hold down the button of the recorded Submaster you want to configure, then adjust the StepRate Fader to modify the FadeTime for it.

|              |                       |             |   |
|--------------|-----------------------|-------------|---|
| MENU         | Mem PlayBack          | Assign Fade | A |
| CLEAR BUFFER | SubMaster Page: [003] | Page UP     | B |
| DMX BASE     |                       | Page Down   | C |
| FX           | Master: xxx           |             | D |

In this mode, the “Page Up” and “Page Down” are used to set the “Submaster Page”.

## 4.7 Menu

The main Menu options can be accessed when in Single Scene, Two Scene or Submaster Modes.

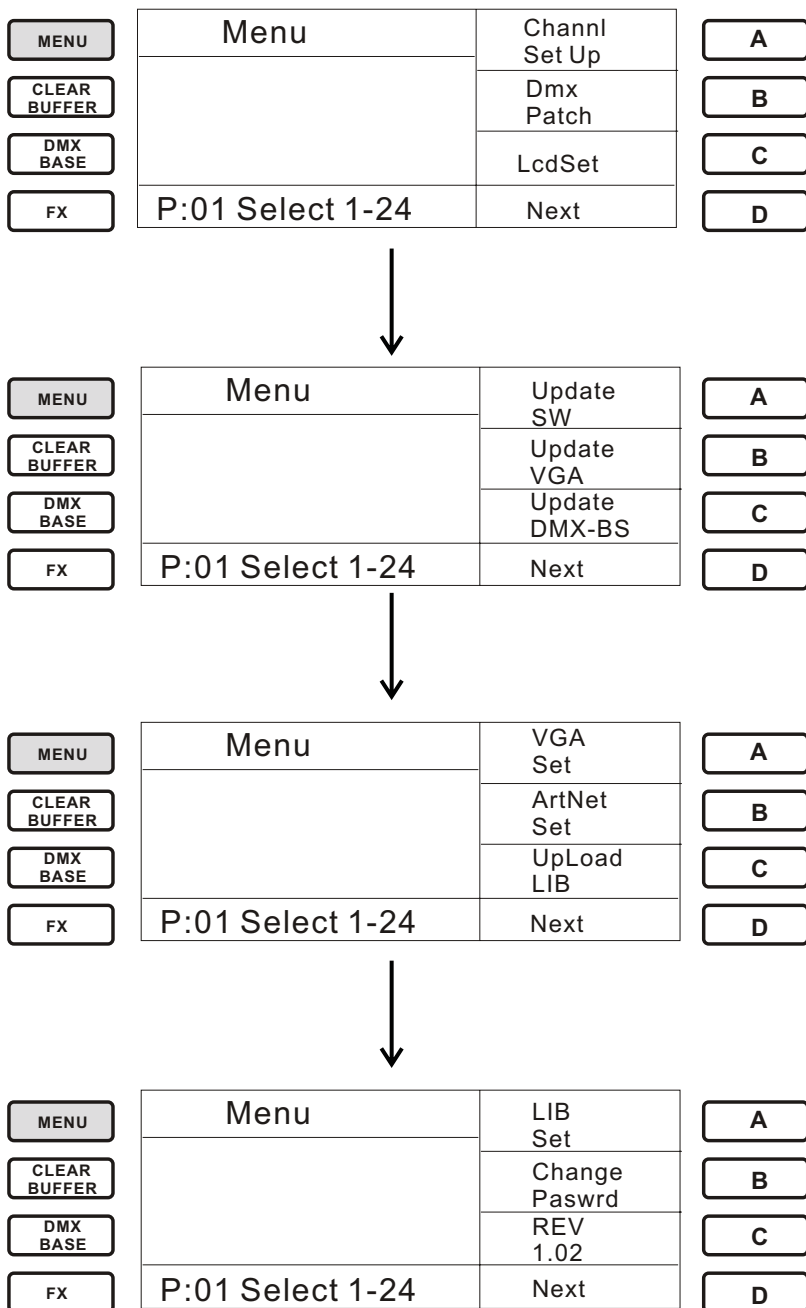

Press “D” to view “Next” set of options.

### 4.7.1 Channel Set up:

Used to assign the DMX channels for each fixture type (Dimmer, LED and ML). The “Up”, “Down”, and “>” are used to set related parameters.

|                 |  |       |   |
|-----------------|--|-------|---|
| MENU            | Channel Set Up   | UP    | A |
| CLEAR<br>BUFFER | Start End<br>Dim: xxx > xxx<br>Led: xxx xxx<br>ML: xxx xxx | Down  | B |
| DMX<br>BASE     |  | >     | C |
| FX              | A: 000 T:-----   | Enter | D |

- Press A to increase the value.
- Press B to decrease the value.
- Press C to move “>” (cursor) to next option.
- Press D “enter” to confirm and save set up.
- Press Menu to cancel or exit.

Note: The user has the options of allocating all 512 channels to whichever fixtures they desire. The user must simply set all other values to 0 (Example: If the user wants to use all 512 channels for Moving Lights, both the Dimmer and LED Start and End channel values must be set to 0).

### 4.7.2 DMX Patch

Used to softpatch Channel to DMX or DMX to channel. Default patch is 01 to 01, 02 to 02, etc...

#### 1. Channel Patch

Channel to DMX patch option. Up to 9 channels can be patched to one fader. The same channel can not be patched to more than one fader.

|                 |                                   |       |   |
|-----------------|-----------------------------------|-------|---|
| MENU            | address Patch                     | UP    | A |
| CLEAR<br>BUFFER | Patch By Cha>E1<br>Dimmer:<br>097 | Down  | B |
| DMX<br>BASE     |                                   | >     | C |
| FX              | A: 000 T:-----                    | Enter | D |

- Press A to increase the value.
- Press B to decrease the value.
- Press C to move “>” (cursor) to next option.
- Press D “enter” to confirm and save set up.
- Press Menu to cancel or exit.

## 2. DMXPatch

DMX to Channel patch option. All 48 conventional channels can be patched to one fader.

|                 |                                   |       |   |
|-----------------|-----------------------------------|-------|---|
| MENU            | address Patch                     | UP    | A |
| CLEAR<br>BUFFER | Patch By Dimmer<br>D: > 001 C: 01 | Down  | B |
| DMX<br>BASE     |                                   | >     | C |
| FX              | A: 000 T:-----                    | Enter | D |

- Press A to increase the value.
- Press B to decrease the value.
- Press C to move ">" (cursor) to next option.
- Press D "enter" to confirm and save set up.
- Press Menu to cancel or exit.

## 3. Default

Used to restore the factory patch settings.

|                 |                |     |   |
|-----------------|----------------|-----|---|
| MENU            | Default Patch? | Yes | A |
| CLEAR<br>BUFFER |                |     | B |
| DMX<br>BASE     |                | No  | C |
| FX              | A: 000 T:----- |     | D |

- Press A to confirm Yes.
- Press C for No and exit.

### 4.7.3 LCD Set

Used to set the contrast and backlite brightness of the LCD.

|                 |                                |       |   |
|-----------------|--------------------------------|-------|---|
| MENU            | Lcd Contrast                   | Up    | A |
| CLEAR<br>BUFFER | Contrast: > xx%<br>Light: High | Down  | B |
| DMX<br>BASE     |                                | >     | C |
| FX              | A: 000 T:-----                 | Enter | D |

The contrast can be adjusted from 0-FL% and backlite brightness can be changed between High, Middle or Low.

- Press A to increase the value.
- Press B to decrease the value.
- Press C to move ">" (cursor) to next option.
- Press D "enter" to confirm and save set up.
- Press Menu to cancel or exit.

#### 4.7.4 Memory Lock

The user has the option to lock/unlock all settings including patches, software options and VGA settings which can only be locked or unlocked by entering the console password. Follow these steps to do so.

1. Press the Menu button to enter Menu Mode.
2. Use the D Key to scroll through menu options.
3. The LCD will give you the option to Lock Memory.
4. Press C key to Lock/Unlock Memory.
5. Enter the console password (Default: 168168) and press Enter.

The console will immediately lock its memory leaving the work modes still available for use.

#### 4.7.5 Update Software

Used to update console firmware.

-The download file is saved in the path of: Trio1248/Software.Bin

**NOTICE:** The path and name of the file cannot be changed

|                 |  |       |   |
|-----------------|--|-------|---|
| MENU            | Update SoftWare                        | Exit  | A |
| CLEAR<br>BUFFER | 1: Insert USB<br>PASSWORD<br>[ ----- ] |       | B |
| DMX<br>BASE     |  |       | C |
| FX              | A: 000 T:-----                         | Enter | D |

1. Insert the USB drive that contains the firmware update file.
2. In Single scene mode, access Menu > Next “D key” > then press A key “Update SW”.
3. Input password: 168168 (press keys FX1, FX6, FX8...) or user password if it was changed.
4. Press D key to Enter and confirm. Once update is complete, LCD will return to the home screen.

#### 4.7.6 Update VGA:

Used to update VGA firmware and display images.

|                 |                |       |   |
|-----------------|----------------|-------|---|
| MENU            | Update VGA     | Exit  | A |
| CLEAR<br>BUFFER | 1:Insert USB   |       | B |
| DMX<br>BASE     |                |       | C |
| FX              | A: 000 T:----- | Enter | D |

1. Insert the USB drive that contains the firmware update file.  
-the file should be stored in the path of TRIO1248/VGA/Main
2. In Single scene mode, access Menu > Next “D key” > then press B key “Update VGA”
3. Press D key to Enter > D key once again to Enter “Main” folder.
4. After update is complete, restart your Trio by switching power Off then back On.

#### 4.7.7 Update DMX\_BS

This function is used to update the DMX Base programs.

The DMXBase files should be stored in the path of: Trio1248/DMXBase

|                 |                                     |       |   |
|-----------------|-------------------------------------|-------|---|
| MENU            | Update DMX Base                     | Exit  | A |
| CLEAR<br>BUFFER | 1:Insert USB<br>Password<br>[-----] |       | B |
| DMX<br>BASE     | Free Space<br>xxxxxK                |       | C |
| FX              | A: 000 T:-----                      | Enter | D |

1. Insert the USB drive that contains the firmware update file.
2. In Single scene mode, access Menu > Next “D key” > then press C key “Update Dmx\_Bs”.
3. Input password: 168168 (press keys FX1, FX6, FX8...) or user password if it was changed.
4. Press D key to Enter.
5. Once update is complete, LCD will return to the home screen.

Your console will read the files from the USB Device.

Choose Enter to complete the Update of the DMX Base.

In this function, a conversion software (Trio Flash Convert) is adopted to convert your flash files, then you can easily record the converted flash files to your console accordingly.

### Getting started with the Trio Flash Convert Program


The Trio Flash program allows you to upload external DMX data to your PC and also to convert Flash (.swf) files for RGB LED's so they can be transferred and played in your Trio. The software is designed for use on Microsoft Windows computer operating systems. Please visit [www.elationlighting.com](http://www.elationlighting.com) to download a copy.

When the TRIOFlash Software is launched, the Main Screen is displayed.



### Preview


Files may also be opened using the [Open Flash] button. The [Play], [Pause], and [Stop] buttons allow manual control of the playback.

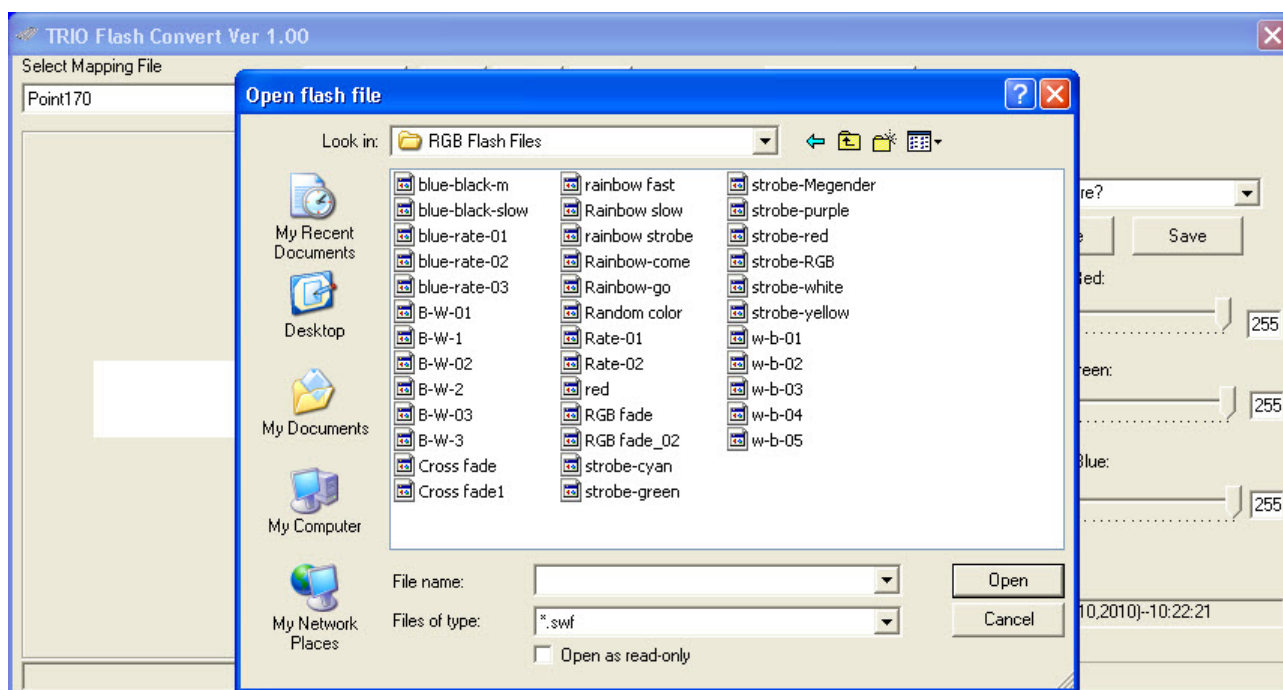


To select a file, click and "Open" to preview it.

## File Convert

Flash files may be converted to DMX scene files (.scn) and loaded to the Trio. With the desired file loaded in Preview Screen, select [File Convert]. Enter Flash file playback speed in frames per second.

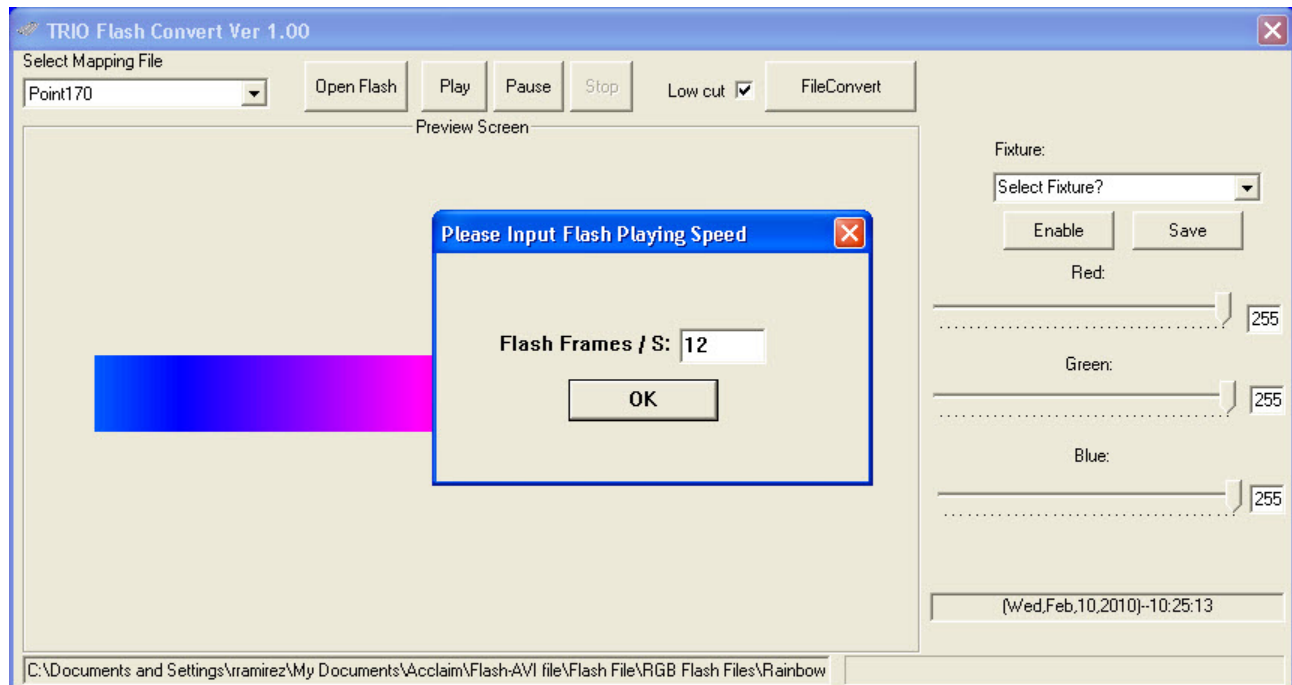


Select [OK].

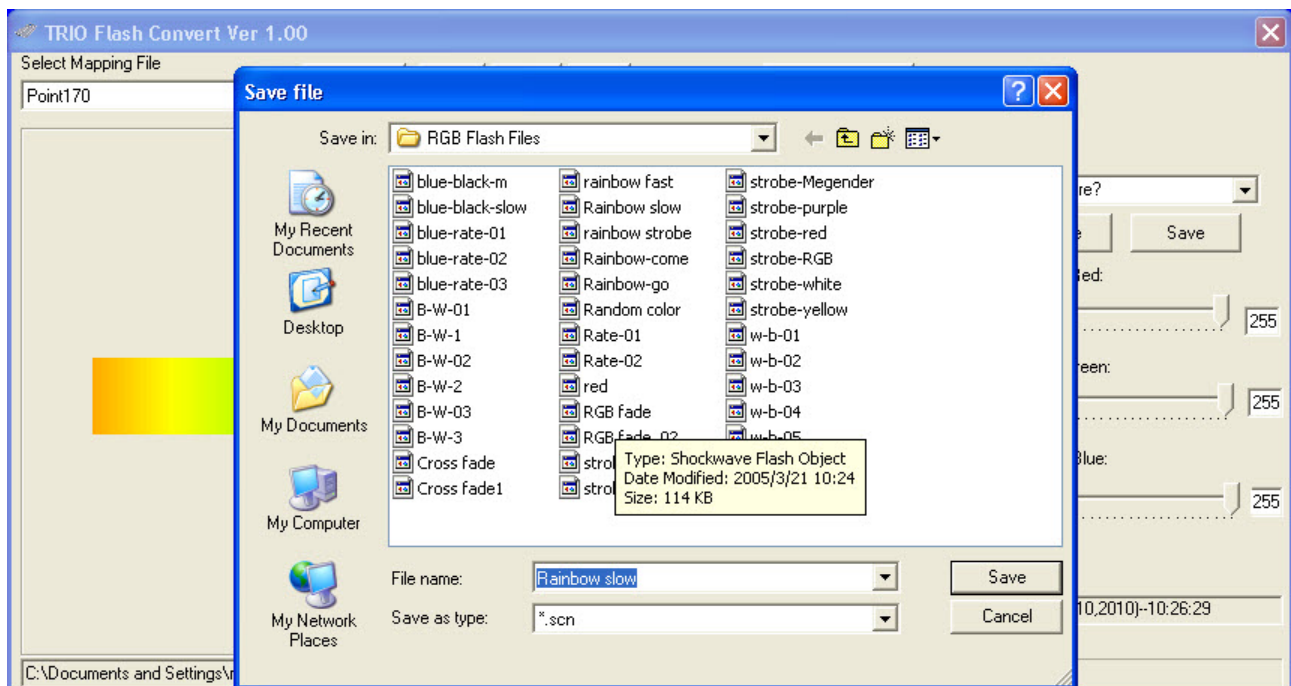




Set desired save file name (.scn) and location. A progress bar shows conversion progress.

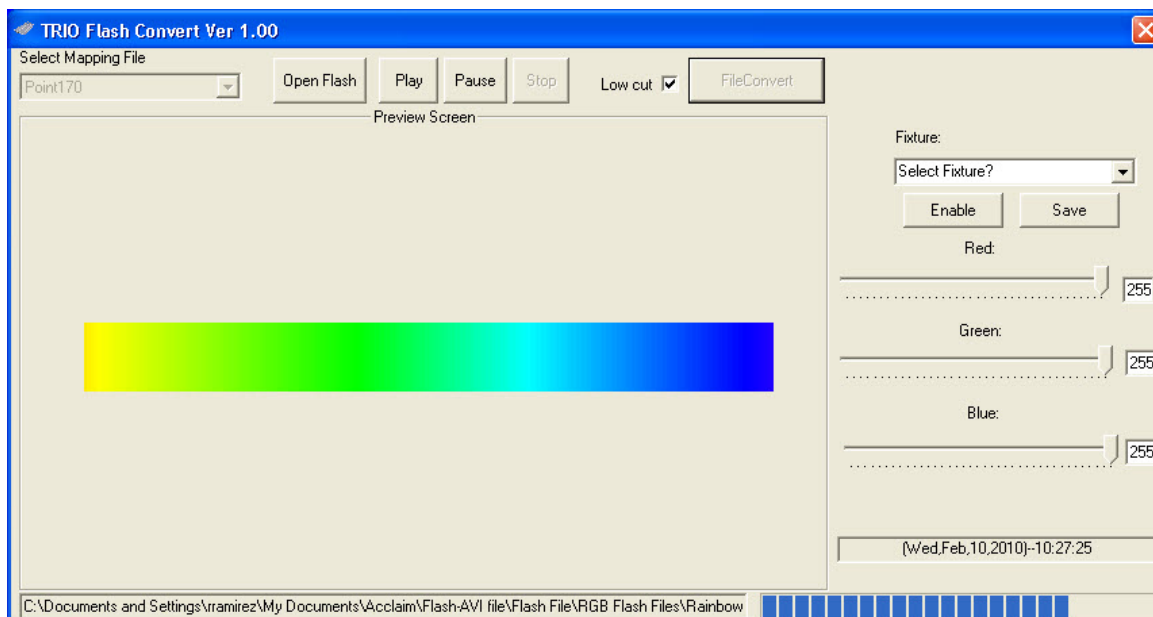

After the conversion is complete, copy the converted file to the path TRIO1248/DMXBASE in your USB drive. You can now “Update DMX Base” with the converted file.

#### 4.7.8 VGA

If you’ve purchased the optional VGA card for your Trio, you will have to Enable it for it to start functioning. The VGA option gives you the ability to view, in realtime, status information of playbacks, effects, submaster contents and preset data. See main display below.

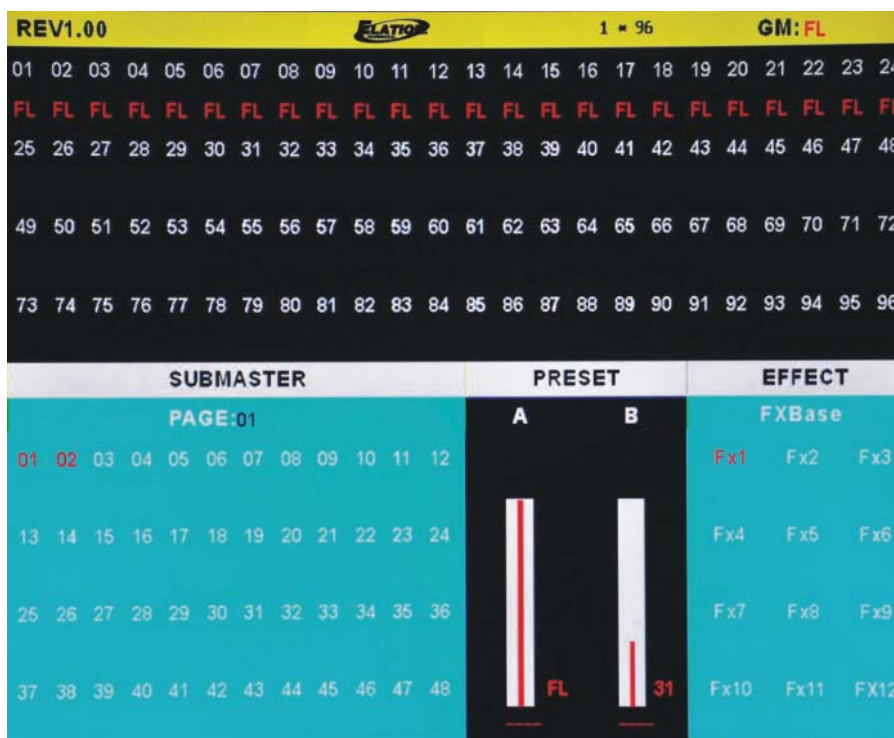

In Menu Mode, press D key until you view “VGA Set” option. Press A key to select it. The LCD shows you as below:

|                 |   |       |   |
|-----------------|---|-------|---|
| MENU            | Enable VGA                                  | Exit  | A |
| CLEAR<br>BUFFER | Selecting<br><Enter> will<br>reboot console |       | B |
| DMX<br>BASE     |   |       | C |
| FX              | A: 245 T:----                               | Enter | D |

Press D key to select Enter. This will enable your VGA card and output to your monitor.

Press A key to Exit.

**Note:** The user is required to do the following preparation prior to enabling/using the VGA card.

1. Install your VGA card properly (please see the “Appendix” of this manual for the VGA card installation tips.)
2. Upload VGA images. (Please refer to the “Update VGA”.)

#### 4.7.9 ArtNet Set:

The ArtNet Set option allows you configure the Trio for use with compatible Artnet devices.

1. OpPoll: Used to discover ArtNet devices connected to the Trios’ Artnet port.
2. View Device: Used to view ArtNet devices already discovered by the Trio.
3. ArtNet Config: Used to Enable/Disable Artnet, configure ArtNet Sub Switch and Universe for your Trio.

Choose ArtNet Config, the LCD shows you:

|                 |  |               |   |
|-----------------|--|---------------|---|
| MENU            | Art Net  | Set<br>SubSw  | A |
| CLEAR<br>BUFFER | Status: Disabled<br>Sub Switch: 01<br>Universe: 01 | Set<br>Univer | B |
| DMX<br>BASE     |  | Enable        | C |
| FX              | P: 01 Select:1-24                                  | Disabl        | D |

1. Press A to set the Sub Switch.
2. Press B to set the Universe.
3. Press C to “Enable” Artnet.
4. Press D to “Disabled” Artnet.

Press Menu to Exit.

#### 4.7.10 Upload LIB

The Upload LIB option allows you to upload your entire system fixture library or a single fixture from the console to a USB drive.

|              |                   |               |   |
|--------------|-------------------|---------------|---|
| MENU         | Upload LIB        | System Upload | A |
| CLEAR BUFFER |                   | FIX Upload    | B |
| DMX BASE     |                   | SubMst Upload | C |
| FX           | P: 01 Select:1-24 | Next          | D |

1. System Upload: Upload the entire system fixture library.
2. Fix Upload: Upload a single fixture from the Trios library.
3. SubMst Upload: Upload the SubMaster programs.....etc.

You must insert a USB drive prior to uploading any of the data offered in “Upload Lib”.

When you want to upload any of the data, press the related softkey to choose it, the LCD screen will guide you through the process.

For example, press A to choose System Upload, the LCD shows you:

|              |                             |     |   |
|--------------|-----------------------------|-----|---|
| MENU         | Store System LIB            | Yes | A |
| CLEAR BUFFER | Are you Sure Upload System? |     | B |
| DMX BASE     | Yes: Upload<br>No: Exit     | No  | C |
| FX           | P: 01 Select:1-24           |     | D |

1. Press A to select “Yes” and upload.
2. Press B to select “No” and exit.

#### 4.7.11 LIB Set

The Download LIB option allows you to download the entire system library or a single fixture from the Trio’s library.

|              |                                  |       |   |
|--------------|----------------------------------|-------|---|
| MENU         | DownLoad LIB                     | Exit  | A |
| CLEAR BUFFER | 1:Insert USB Password<br>[-----] |       | B |
| DMX BASE     |                                  |       | C |
| FX           | P: 01 Select:1-24                | Enter | D |

1. Make sure you have inserted your USB drive.
2. Enter password 1,6,8,1,6,8 by pressing FX1, Fx6, FX8, FX1, FX6, FX8 in orderly fashion.
3. Press D to Enter. The LCD will show you as follows:

|              |                   |               |   |
|--------------|-------------------|---------------|---|
| MENU         | DownLoad LIB      | System DwLoad | A |
| CLEAR BUFFER |                   | FIX DwLoad    | B |
| DMX BASE     |                   | SubMst DwLoad | C |
| FX           | P: 01 Select:1-24 | Next          | D |

1. System Download: Download the entire system library.
2. Fix Download: Download the Fixture Library
3. SubMst Download: Download the Sub Master Library....etc
4. Empty System: to empty the primary contents in the console prior to download.

Press the related softkey to select the library you want to download. The LCD Screen will prompt you:

|                 |                                  |     |   |
|-----------------|----------------------------------|-----|---|
| MENU            | Download System                  | Yes | A |
| CLEAR<br>BUFFER | Are you Sure<br>Download System? |     | B |
| DMX<br>BASE     | Yes: Upload<br>No: Exit          | No  | C |
| FX              | P: 01 Select:1-24                |     | D |

Press A to select Yes to download

Press B to select No to exit

When downloading files for the same item, the original files will be overwritten.

If you prefer to totally clear up the configurations in the console prior to downloading from the USB device, you may select “Empty System” to clear it up.

The console will take several minutes to complete the download.

#### 4.7.12 Change Password:

The Change Password option allows the user to change the password for the console.

Select “Change Password”, the console LCD will prompt you to input “Old Password” (the default password is set: 168168)

|                 |                       |       |   |
|-----------------|-----------------------|-------|---|
| MENU            | Change Password       | Exit  | A |
| CLEAR<br>BUFFER | Input Old<br>Password |       | B |
| DMX<br>BASE     | [-----]               |       | C |
| FX              | P: 01 Select:1-24     | Enter | D |

Press Fx1, Fx6, Fx8, Fx1, Fx6, Fx8 to input the old password, select Enter. The console will then prompt you to input the new password.

|                 |                       |       |   |
|-----------------|-----------------------|-------|---|
| MENU            | Change Password       | Exit  | A |
| CLEAR<br>BUFFER | Input New<br>Password |       | B |
| DMX<br>BASE     | [-----]               |       | C |
| FX              | P: 01 Select:1-24     | Enter | D |

Input a new 6 digit password, and press Enter. The console will request you to input the new password a second time.

Once the new password is successfully entered, the LCD will display:

|                 |  |       |   |
|-----------------|--|-------|---|
| MENU            | Change Password                          | Exit  | A |
| CLEAR<br>BUFFER | Success!!<br>Pls Remeber<br>New password |       | B |
| DMX<br>BASE     |  |       | C |
| FX              | P: 01 Select:1-24                        | Enter | D |

If the user inputs an incorrect password in the process, the console will prompt you with “invalid password”. The user will then be asked to provide the correct one. If you forget or misplace your password, please contact our customer support department for assistance.

#### 4.7.13 REV 1.21

Shows the current software version of your console is 1.21

#### 4.8 VGA Card Installation Tips:

1. Save all data.
2. Disconnect the power from the rear of your console.
3. Remove the fasteners on the rear panel of the console.
4. Carefully insert the new VGA card and insure that is is installed correctly.
5. Re-install the fasteners.
6. Connect your monitor and reconnect the power supply to the console.
7. Turn on your system and select set up.
8. Once you have enabled your monitor, it will show the current state of your system. You may find that the horizontal position of the display is slightly offset. Use the position control on your monitor to re-position the display if needed. Adjust the video display brightness and contrast as needed to obtain the best image.

**DMX-512:** DMX is short for Digital Multiplex. This is a universal protocol used by most lighting and controller manufactures as a form of communication between intelligent fixtures and controllers. A DMX controller sends DMX data instructions from the controller to the fixture. DMX data is sent as serial data that travels from fixture to fixture via the DATA “IN” and DATA “OUT” XLR terminals located on all DMX fixtures (most controllers only have a DATA “OUT” terminal).

**DMX Linking:** DMX is a language allowing all makes and models of different manufactures to be linked together and operate from a single controller, as long as all fixtures and the controller are DMX compliant. To ensure proper DMX data transmission, when using several DMX fixtures try to use the shortest cable path possible. The order in which fixtures are connected in a DMX line does not influence the DMX addressing. For example; a fixture assigned a DMX address of 1 may be placed anywhere in a DMX line, at the beginning, at the end, or anywhere in the middle. Therefore, the first fixture controlled by the controller could be the last fixture in the chain. When a fixture is assigned a DMX address of 1, the DMX controller knows to send DATA assigned to address 1 to that unit, no matter where it is located in the DMX chain.

#### Data Cable (DMX Cable) Requirements (For DMX and Master/Slave Operation):

our unit and your DMX controller require a approved DMX-512 110 Ohm Data cable for data input and data output (Figure 1). We recommend Accu-Cable DMX cables. If you are making your own cables, be sure to use standard 110-120 Ohm shielded cable (This cable may be purchased at almost all professional sound and lighting stores). Your cables should be made with a male and female XLR connector on either end of the cable. Also remember that DMX cable must be daisy chained and cannot be split.



Figure 1

**Notice:** Be sure to follow figures two and three when making your own cables. Do not use the ground lug on the XLR connector. Do not connect the cable’s shield conductor to the ground lug or allow the shield conductor to come in contact with the XLR’s outer casing. Grounding the shield could cause a short circuit and erratic behavior.



Figure 2

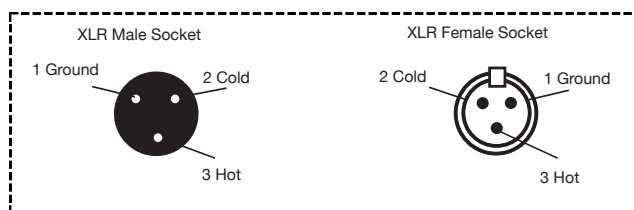


Figure 3

| XLR Pin Configuration              |
|------------------------------------|
| Pin 1 = Ground                     |
| Pin 2 = Data Compliment (negative) |
| Pin 3 = Data True (positive)       |

**Special Note: Line Termination.** When longer runs of cable are used, you may need to use a terminator on the last unit to avoid erratic behavior. A terminator is a 90-120 ohm 1/4 watt resistor which is connected between pins 2 and 3 of a male XLR connector (DATA + and DATA -). This unit is inserted in the female XLR connector of the last unit in your daisy chain to terminate the line. Using a cable terminator (ADJ part number Z-DMX/T) will decrease the possibilities of erratic behavior.



Termination reduces signal errors and avoids signal transmission problems and interference. It is always advisable to connect a DMX terminal, (Resistance 120 Ohm 1/4 W) between PIN2 (DMX-) and PIN3 (DMX+) of the last fixture.

Figure 4

**5-Pin XLR DMX Connectors.** Some manufactures use 5-pin XLR connectors for DATA transmission in place of 3-pin. 5-pin XLR fixtures may be implemented in a 3-pin XLR DMX line. When inserting standard 5-pin XLR connectors in to a 3-pin line a cable adaptor must be used, these adaptors are readily available at most electric stores. The chart below details a proper cable conversion.

| 3-Pin XLR to 5-Pin XLR Conversion |                        |                     |
|-----------------------------------|------------------------|---------------------|
| Conductor                         | 3-Pin XLR Female (Out) | 5-Pin XLR Male (In) |
| Ground/Shield                     | Pin 1                  | Pin 1               |
| Data Compliment (- signal)        | Pin 2                  | Pin 2               |
| Data True (+ signal)              | Pin 3                  | Pin 3               |
| Not Used                          |                        | Pin 4 - Do Not Use  |
| Not Used                          |                        | Pin 5 - Do Not Use  |

## 6. Service

### 6.1 Maintenance

The Trio-1248 Lighting Console should require minimal maintenance over its operational life. The following basic maintenance practices will help keep the system performing well and looking good.

#### 6.1.1 General Inspection

1. Inspect the system components on a regular basis. Check each button and indicator for proper operation. Ensure data cables are securely connected. Check for dirt or moisture on all system surfaces.

2. Correct any external problems and test the system. If there are still indications that something is not functioning correctly, contact Elation Customer Support. To prevent the risk of electrical shock, do not open this unit. There are no user serviceable parts inside this unit.

#### 6.1.2 Basic Cleaning

1. Wipe the external surfaces of system components on a regular basis using a dry cloth to prevent dust accumulation. If necessary, slightly moisten the cloth with a mild soap and water solution.

Never use an abrasive cleaning solution on the exterior surfaces of the system components.

### 6.2 Troubleshooting

The Trio-1248 Lighting Console should perform well when properly operated and maintained, however, sometimes things just don't work like they should. Table 5 contains symptoms, causes, and resolutions for common faults.

**Table 5**

| Symptom                  | Cause                    | Resolution   |
|--------------------------|--------------------------|--|
| No Power                 | Bad power connection.    | Check power connection. Reconnect plug if needed.                |
|                          | No receptacle power.     | Ensure receptacle has power.                                     |
|                          | Bad fuse.                | Check fuse. Replace if needed.                                   |
| Erratic Fixture Behavior | Improper DMX addressing. | Check and correct DMX addressing.                                |
|                          | Improper DMX data cable. | Verify proper DMX data cable. Replace if needed.                 |
|                          | No DMX termination.      | Properly terminate DMX data run.                                 |
| No Control               | Bad data connection.     | Check all data cable connections. Repair or reconnect as needed. |
|                          | No power.                | See No Power above.  |
|                          | Bad remote batteries.    | Replace remote batteries.  |
|                          | Improper DMX addressing. | Check and correct DMX addressing.                                |



Elation® provides a customer support line, to provide set up help and to answer any question should you encounter problems during your set up or initial operation. You may also visit us on the web at [www.americandj.com](http://www.americandj.com) for any comments or suggestions. Service Hours are Monday through Friday 9:00 A.M. to 5:00 P.M., Pacific Standard Time.

Voice: (323) 582-3322  
Fax: (323) 582-3108  
E-mail: [support@elationlighting.com](mailto:support@elationlighting.com)

**Warning!** To prevent or reduce the risk of electrical shock or fire, do not expose this unit to rain or moisture.

**Caution!** There are no user serviceable parts inside this unit. Do not attempt any repairs yourself, doing so will void your manufactures warranty. In the unlikely event your unit may require service please contact Elation®.

The Trio-1248™ carries a two year limited warranty. Please fill out the enclosed warranty card to validate your purprogram. All returned service items whether under warranty or not, must be freight prepaid and accompany a return authorization (R.A.) number. The R.A. number must be clearly written on the outside of the return package. A brief description of the problem as well as the R.A. number must also be written down on a piece of paper included in the shipping carton. If the unit is under warranty, you must provide a copy of your proof of purprogram invoice. You may obtain a R.A. number by contacting our customer support team on our customer support number. All packages returned to the service department not displaying a R.A. number on the outside of the package will be returned to the shipper.

**TWO YEAR LIMITED WARRANTY**

A. Elation® hereby warrants, to the original purprogramr, Elation® products to be free of manufacturing defects in material and workmanship for a period of 2 Years (730 days) from the date of purprogram. This warranty shall be valid only if the product is purprogramd within the United States of America, including possessions and territories. It is the owner's responsibility to establish the date and place of purprogram by acceptable evidence, at the time service is sought.

B. For warranty service, send the product only to the Elation® factory. All shipping charges must be pre-paid. If the requested repairs or service (including parts replacement) are within the terms of this warranty, Elation® will pay return shipping charges only to a designated point within the United States. If the entire instrument is sent, it must be shipped in its original package. No accessories should be shipped with the product. If any accessories are shipped with the product, Elation® shall have no liability whatsoever for loss of or damage to any such accessories, nor for the safe return thereof.

C. This warranty is void if the serial number has been altered or removed; if the product is modified in any manner which Elation® concludes, after inspection, affects the reliability of the product; if the product has been repaired or serviced by anyone other than the Elation® factory unless prior written authorization was issued to purprogramr by Elation®; if the product is damaged because not properly maintained as set forth in the instruction manual.

D. This is not a service contract, and this warranty does not include maintenance, cleaning or periodic check-up. During the period specified above, Elation® will replace defective parts at its expense, and will absorb all expenses for warranty service and repair labor by reason of defects in material or workmanship. The sole responsibility of Elation® under this warranty shall be limited to the repair of the product, or replacement thereof, including parts, at the sole discretion of Elation®. All products covered by this warranty were manufactured after January 1, 1990, and bear identifying marks to that effect.

E. Elation® reserves the right to make changes in design and/or improvements upon its products without any obligation to include these changes in any products theretofore manufactured.

F. No warranty, whether expressed or implied, is given or made with respect to any accessory supplied with products described above. Except to the extent prohibited by applicable law, all implied warranties made by Elation® in connection with this product, including warranties of merchantability or fitness, are limited in duration to the warranty period set forth above. And no warranties, whether expressed or implied, including warranties of merchantability or fitness, shall apply to this product after said period has expired. The consumer's and or Dealer's sole remedy shall be such repair or replacement as is expressly provided above; and under no circumstances shall Elation® be liable for any loss or damage, direct or consequential, arising out of the use of, or inability to use, this product.

G. This warranty is the only written warranty applicable to Elation® Products and supersedes all prior warranties and written descriptions of warranty terms and conditions heretofore published.

**Specifications**

|                |                                 |
|----------------|---------------------------------|
| POWER SUPPLY:  | DC 9-12V DC, 2A Max             |
| INPUT/OUTPUTS: | DMX Out                         |
|                | DMX In                          |
|                | ArtNET Out                      |
|                | VGA                             |
|                | USB                             |
|                | DC IN                           |
| DIMENSIONS:    | 264mm(L) x 482mm(W) x 70mm(H)   |
|                | 10.4" (L) x 19" (W) x 2.75" (H) |
| WEIGHT:        | 9Lbs./ 4.5Kgs.                  |
| WARRANTY:      | 2 Year (730 Days)               |

**Please Note:** Specifications and improvements in the design of this unit and this manual are subject to change without any prior written notice.

©Elation Professional®  
6122 S. Eastern Ave., Los Angeles, CA 90040 USA  
Tel: 323-582-2650 Fax: 323-582-2610  
Web: [www.elationlighting.com](http://www.elationlighting.com) E-mail: [info@elationlighting.com](mailto:info@elationlighting.com)